

# Parts List and

# Operating & Maintenance Manual

MODEL

# 1316S

Before sn 7299

## Miter Head Bandsaw

Built better to work stronger and last longer



1316S



1316S-EXT  
Extended Capacity

REV 231023



# WellSaw®

Made In The USA

Quality Metal Cutting Bandsaws

2829 N. Burdick St. Kalamazoo, MI 49004

Phone: 269-345-1132 Fax: 269-345-0095

[www.wellsaw.com](http://www.wellsaw.com)



## FORWARD

The Model 1316S Wellsaw has been designed and manufactured to conform to Wellsaw's recognized high standards of quality and performance. Each saw must pass a series of final inspection tests, including actual metal cutting operations, before it is shipped. For this saw to provide satisfactory service, it is necessary that it be properly installed, operated and maintained. This manual has been prepared to assist you in carrying out these functions. We urge you to study this manual and follow its suggestions.

## RECEIVING AND INSTALLATION

### Un-crating

Carefully remove the protective crating and skid so the saw and its parts are not marred or otherwise damaged. In the event of damage in transit, notify the carrier and file a Proof of Loss Claim immediately.

### Shortages

Inspect the complete shipment carefully against the itemized packing list. Make sure that all items are present and in good condition. In the event of any shortage, notify the distributor from whom you purchased the saw and the carrier who made final delivery.

### Utility Hook-Up

The use of a qualified electrician is always recommended when connecting the saw to the main power supply. Electrical codes differ from area to area and it is the customer's responsibility to ensure that their saw complies with applicable codes. Your Wellsaw is pre-wired at the factory for a specified voltage. Always check the motor and electrical panel to ensure that they are both wired to correspond to your electrical power supply.

# WARNING

- Misuse of this machine can cause serious injury.
- For safety, machine must be set up, used and serviced properly.
- Read, understand and follow instructions in the operator's and parts manual.

## **When setting up machine:**

- Always avoid using machine in damp or poorly lighted work areas.
- Always be sure machine is securely anchored to the floor.
- Always keep machine guards in place.
- Always put start switch in "OFF" position before plugging in machine.

## **When using machine:**

- Never operate with machine guards missing.
- Always wear safety glasses with side shields (See ANSI Z87.1)
- Never wear loose clothing or jewelry.
- Never overreach - you may slip and fall into the machine.
- Never leave machine running while away from it.

- Always shut off the machine when not in use.

## **When servicing the machine:**

- Always unplug machine from electrical power while servicing.
- Always follow instructions in operators and parts manual when changing accessory tools or parts.
- Never modify the machine.

Read and follow these simple rules for best results and full benefits from your machine. Used properly, Wellsaw's machinery is among the best in design and safety. However, any machine used improperly can be rendered inefficient and unsafe. It is absolutely mandatory that those who use our products be properly trained in how to use them correctly. They should read and understand the Operators and Parts manual as well as all labels affixed to the machine. Failure in following all of these warnings can cause serious injuries.

## Machinery general safety warnings

1. Always wear protective eye wear when operating machinery. Eye wear shall be impact resistant, protective safety glasses with side shields which comply with ANSI Z87.1 specifications. Use of eye wear which does not comply with ANSI Z87.1 specifications could result in severe injury from breakage of eye protection.
2. Wear proper apparel. No loose clothing or jewelry which can get caught in moving parts. Rubber soled footwear is recommended for best footing.
3. Do not overreach. Failure to maintain proper working position can cause you to fall into the machine or cause your clothing to get caught - pulling you into the machine.
4. Keep guards in place and in proper working order. Do not operate the machine with guards removed.
5. Avoid dangerous working environments. Do not use stationary machine tools in wet or damp locations. Keep work areas clean and well lit. Special electrics should be used when working on flammable materials.
6. Avoid accidental starts by being sure the start switch is "OFF" before plugging in the machine.
7. Never leave the machine running while unattended. Machine shall be shut off whenever it is not in operation.
8. Disconnect electrical power before servicing. Whenever changing accessories or general maintenance is done on the machine, electrical power to the machine must be disconnected before work is done.
9. Maintain all machine tools with care. Follow all maintenance instructions for lubricating and the changing of accessories. No attempt shall be made to modify or have makeshift repairs done to the machine. This not only voids the warranty but also renders the machine unsafe.
10. Secure work. Use clamps or a vise to hold work when practical. It is safer than using your hands and it frees both hands to operate the machine.
11. Never brush away chips while the machine is in operation.
12. Keep work area clean. Cluttered areas invite accidents.
13. Remove adjusting keys and wrenches before turning the machine back on.
14. Use the right tool. Don't force a tool or attachment to do a job it was not designed for.
15. Use only recommended accessories and follow manufacturers instructions pertaining to them.
16. Keep hands in sight and clear of all moving parts and cutting surfaces.
17. All visitors should be kept at a safe distance from the work area. Make workshop completely safe by using padlocks, master switches, or by removing starter keys.
18. Know the tool you are using - its application, limitations, and potential hazards.

19. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

-Lead from lead based paint

-Crystalline silica from bricks and cement and other masonry products, and

-Arsenic and chromium from chemically treated lumber

20. Your risk from those exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specifically designed to filter out microscopic particles.

### General Electrical Cautions

This saw should be grounded in accordance with the National Electrical Code and local codes and ordinances. This work should be done by a qualified electrician. The saw should be grounded to protect the user from electrical shock.

Wire sizes:

Caution: for circuits which are far away from the electrical service box, the wire size must be increased in order to deliver ample voltage to the motor. To minimize power losses and to prevent motor overheating and burnout, the use of wire sizes for branch circuits or electrical extension cords according to the following table is recommended:

Conductor Length	AWG (American wire gauge) number	
	240 volt lines	120 volt lines
0-50 feet	No. 14	No. 14
50-100 feet	No. 14	No. 12
Over 100 feet	No. 12	No. 8

## Safety instructions on sawing systems

1. Always wear leather gloves when handling a saw blade. The operator shall not wear gloves when operating the machine.

2. All doors shall be closed, all panels replaced, and all other safety guards in place prior to the machine being started or operated.

3. Be sure that the blade is not in contact with the workpiece when the motor is started. The motor shall be started and you should allow the saw to come to full speed before bringing the workpiece into the saw blade.

4. Keep hands away from the blade area. **See figure A.**

5. Remove any cut off piece carefully while keeping your hands free from the blade area.

6. Saw must be stopped and electrical supply must be cut off before any blade replacement or adjustment of blade support mechanism is done, or before any attempt is made to change the drive belts or before any periodic service or maintenance is performed on the saw.

7. Remove all loose items and any unnecessary work pieces from the area before starting machine.

8. Bring adjustable saw guides and guards as close as possible to the work piece.

9. Always wear protective eye wear when operating, servicing or adjusting machinery. Eye wear shall be impact resistant, protective safety glasses with side shields complying with ANSI Z87.1 specifications. Use of eye wear which does not comply with ANSI Z87.1 specifications could result in severe injury from breakage of eye protection. **See figure B.**

10. Non-slip footwear and safety shoes are recommended. **See figure C.**

11. Wear ear protectors (plugs or muffs) during extended periods of operation. **See figure D.**

12. The workpiece, or part being sawed, must be securely clamped before the saw blade enters it.

13. Remove cut off pieces carefully, keeping hands away from saw blade.

14. Saw must be stopped and electrical supply cut off or machine unplugged before reaching into cutting area.

15. Avoid contact with coolant, especially guarding your eyes.

Figure A



Figure B



Figure C



Figure D



## Index

### General

Automatic Stop	6
Blade Brushes	8
Blade Selection Guide	34-35
Feed Pressure Adjustment	8
Fixed Vise Jaw	8
Gear Box Repair	7
Hydraulic Feed Control	8
Lubrication	10
Maintenance	10
Motor Switch	8
Notes on Sawing	5
Placing Blade on Saw	7
Receiving & Installation	1
Safety Instructions	2-3
Service Kits	9
Servicing Blade Guides	8
Sliding Vise Jaw	8
Specifications	4
Trouble Shooting	5
Variable Speed Drive	7
Warranty	11
Wheel Pitch Adjustment	7
Machine Operation	11

### Drawings

Frame Assembly	12
Bed Assembly	14
Table Assembly	16
Base Assembly	18
Down Feed Assembly	20
Blade Guide Assembly ( 1" blade)	22
Rite Tensioning® Device	24
Motor & Gearbox	26
Coolant System	28
Blade Brush Assembly	30
Electrical Controls	30

### Parts Lists & Part Numbers

Frame Assembly	13
Bed Assembly	15
Table Assembly	17
Base Assembly	19
Down Feed Assembly	21
Blade Guide Assembly ( 1" blade)	23
Rite Tensioning® Device	25
Motor & Gearbox	27
Coolant System	28
Blade Brush Assembly	29
Electrical Controls	31

## Specifications

Capacity:	Round	Rectangular
<b>1316S</b>		
@ 0 (90)	13"	13" x 15-1/4"
@ 45	11-1/2"	13" x 11-1/2"
@ 60	8"	8-1/2" x 8"
<b>1316S-EXT Capacity:</b>		
@0 (90)	13"	13" x 18"
@45	13"	13" x 18"
@60	13"	13" x 14.5"
<b>Blade Speed</b>	Infinitely variable, 70-375 SFPM	
<b>Blade Guides:</b>	Carbide Guides with Rollers	
<b>Motor</b>		
3hp		208-230/460/60/3
2hp		115/208-230/60/1
<b>Drive</b>	V-Belt	
<b>Blade Size standard 1316S</b>	1" x .035 x 12'6"	
<b>Blade Size for 1316S-EXT</b>	1" x .035 x 15'6"	
<b>Height to top of Bed</b>	35"	
<b>Coolant Tank Capacity</b>	8 gallons, 170 GPH	
<b>Floor Space</b>	90" wide x 76" long	
<b>Stock Stop Projection</b>	25"	
<b>Blade Tension</b>	Manual Rite Tension®	
<b>Feed Rate Control</b>	Gravity, Variable Hydraulic	
<b>Shipping Weight Standard 1316S</b>	1720 lbs.	
<b>Shipping Weight for 1316S-EXT</b>	1810 lbs.	

### Options Available:

**Blade Break/Stall Shut Off**  
**Work Light**  
**5' and 10' x 18" Roller Conveyors**  
**6" and 12" Stock Stands**

## Notes on Sawing

It is widely recognized that a proficient operator is a key to optimum bandsawing. He makes certain the machine is properly maintained and adjusted for dependable operation. He carefully sets up each cutting job to prevent damage to the machine and obtain the best performance from the equipment.

Experienced blade dealers can be very help-ful in selecting the grade and proper tooth blade for each sawing job. All blades should be straight, have sharp teeth with uniform set, and be “broken in” at a reduced feed rate to obtain good cutting performance and blade life.

Every cutting situation has special characteristics requiring some experimentation to determine which blade, speed and feed rate will achieve the most satisfactory result. Cutting charts indicate a good starting point, but must be modified by direct experience if optimum performance is desired.

Here are some helpful pointers for adjusting speed and feed for good cutting performance.

1. Make sure the saw is cutting a good chip from the workpiece.
2. Watch for blue chips or excessive “smoke” indicating heat in the cut which could damage the blade or work harden the material being cut.
3. Watch for excessive vibration or chatter marks on the cut-off piece indicating possible damage to the saw teeth by “hammering”.
4. Check the cut-off piece for flatness. A dull blade or excessive feed will produce a “belly” in the cut.
5. Inspect the blade for worn, rounded or shiny cutting edges. Avoid force cutting which will allow chips to “weld” to saw teeth and eventually cause the teeth to be stripped off the blade.
6. When experimenting, start with a slow speed and feed rate. Gradually increase blade speed and then feed pressure by small amounts until adverse effects are noted. You can then set the speed and feed at a reasonable level for continuous cutting. Remember that blade speed and feed pressure must be balanced to keep cutting a good chip.

## Trouble Shooting

### Premature Dulling of Blade Teeth

1. Feed rate too high or low. Check pages 36 and 37.
2. Blade speed too slow or too fast.
3. Faulty material; heavy scale, hard spots, etc.
4. Verify type of material.
5. If coolant flow is not covering saw teeth, increase coolant flow rate.
6. If saw is vibrating in cut, reduce blade speed or increase feed rate.
7. Chipped or broken tooth may be lodged in cut.
8. “Chip welding” caused by improper feed and speed.
9. Incorrect coolant mixture.
10. Incorrect blade selection
11. Improper break-in of new blade. New blades should be run initially with reduced feed pressure for approximately 50 to 100 square inches.
12. Saw blade teeth may be hitting blade guides. Check for proper blade size.

### Saw Blade Vibration

1. Incorrect blade speed for material.
2. Blade tension insufficient.
3. Back-up bearing may be worn.
4. Incorrect choice of saw tooth pitch.
5. Incorrect coolant mixture.
6. Incorrect feed setting. Increase feed.
7. Workpiece not firmly clamped in vice.
8. Worn or improperly adjusted saw guides. Check and make necessary adjustments.

### Blade Teeth Chipping or Ripping Out

1. Blade pitch too coarse. Use a fine pitch saw blade on thin work sections.
2. Improper break-in of new blade. Do not start a new blade in an old cut.
3. Work piece not held firmly enough. Clamp work securely.
4. Introduce cooling if it is not being used.
5. Faulty material; scale or hard spots.
6. Blade gullets may be loaded. Use higher viscosity lubricant or coolant.
7. Blade speed and feed may need adjustment.



### **Premature Blade Breakage**

1. Poor weld in the blade.
2. Feed rate set too high. Reduce it.
3. Excessive blade speed. Adjust it.
4. Blade guides set too tight or misaligned.
5. Blade tension set too high.
6. Blade running against flange on wheels. Adjust wheel pitch.

### **Blade Squeal**

1. Feed rate too light for blade speed. Increase feed rate and/or reduce blade speed.

### **Blade Slips Off Band Wheels**

1. Blade not tensioned correctly.
2. Wheel pitch not set properly.
3. Guides set too tight.

### **Gullets of Blade Teeth Loading**

1. Blade pitch too fine. Review blade selection.
2. Incorrect blade speed. Consult cutting chart.
3. If not using coolant, apply it.

### **Chips Welding to Blade Teeth**

1. Cutting rate too high.
2. Chip brush may be out of adjustment.
3. Check coolant and application.

### **Blade Becoming Scored**

1. Saw guides may be worn. Check and replace if necessary.
2. Too much pressure on saw guides. Adjust.
3. Guides may be out of alignment.

### **Blade Making Belly-Shaped Cut**

1. Blade tension too light. Increase it.
2. Saw guides too far from work piece.
3. Blade pitch too fine. Use larger pitch and positive rake tooth form.
4. Excessive feed. Decrease it.
5. Dull blade.

### **Inaccurate Cut-Off**

1. Is conveyor or stock stand level with saw bed?
2. Insufficient blade tension.
3. Blade guides too far apart. Always set blade guides as close to the piece as possible.
4. Blade may be dull. Check and replace if necessary.
5. Feed pressure too high. Reduce it.

6. Blade guides loose, worn or out of alignment.
7. Too many teeth-per-inch. Blade not cutting freely.
8. Chip brush not cleaning teeth properly.
9. Dirty coolant.
10. Check for loose fasteners.

### **Rough Cut / Poor Finish**

1. Excessive feed rate. See recommendations.
2. Blade too coarse. Use finer blade pitch.
3. Inadequate cutting fluid. Replace.

### **Blade Stalls in Work**

1. Insufficient blade tension.
2. Excessive feed pressure.
3. Blade tooth spacing too coarse.
4. Motor worn or defective.
5. Guides too tight against blade.

### **Blade Does Not Track Properly**

1. Set wheel pitch so that blade runs to wheel flange but not against it.
2. Is blade tension correct?
3. Is back of blade riding against backup bearing? If not, adjust it.

### **Motor Overheating**

1. Check for correct voltage supply. Check voltage at motor. Check magnetic starter heaters.
2. Check for loose electrical connections.
3. Does motor amp reading correspond to rating on motor specifications tag?
4. Is internal motor wiring correct?
5. Is drive belt over tightened?

### **Automatic Stop**

When the blade has completed a cut through the material, the saw frame drops onto a limit switch actuator which shuts the motor off.

When changing a blade or doing any other maintenance or repair, *be sure the automatic stop is engaged and disconnect the main power supply.*

It is necessary to raise the saw frame to clear the limit switch actuator before the saw can be started.



## PLACING THE BLADE ON SAW

1. Raise saw frame part way.
2. Open idle and drive wheel guards.
3. Remove blade brush drive belt by loosening thumb screw.
4. Loosen Rite Tension® take up screw and remove old blade. In the event of a broken blade, be sure Rite tension® is open by turning take up screw counter-clockwise at least six (6) times.
5. Open each carbide guide. Reach behind each blade guide assembly and turn the black knurled knob counter clockwise until it stops. This pulls the carbide block away from the blade.
6. Uncoil new blade, WARNING: wear gloves to protect your hands and eye protection. Make certain blade teeth point in the direction of blade travel which is toward the motor.
7. Place new blade on the band wheels and fit it into the guides. Close the carbides by turning the black knob clockwise until it stops. It does not need to be tight. Make sure that the blade is not riding up on the band wheel flanges.
8. Grasp blade on frame side and push it toward guide bracket beam to hold it in position while turning Rite Tension® take up screw.
9. Tighten blade to proper tension. Blade is properly tensioned when the take up screw is tightened until mechanism bottoms.
10. Re-attach the blade brush belt and close all guards.

## Wheel Pitch Adjustment

If the saw blade runs too low, runs off the wheels, or runs too high and rubs the wheel flange, a wheel adjustment must be made.

Loosen the blade before making the following adjustments.

### Idler Wheel:

Blade running too low or off the wheel- adjust the idler wheel block. Loosen the two cap screws in the block, opposite the take up screw end, one-half turn. Tighten the opposite two cap screws one-half turn. Repeat if necessary.

Blade running too high and against the idler wheel flange- The blade can become distorted, its top edge rolled over and wheel flange will wear excessively. To correct this, loosen the two cap screws closest to the take up screw one-half turn. Tighten the opposite cap screws one-half turn. Repeat if necessary.

### Drive Wheel:

Blade running too low or off the drive wheel- Loosen

the two cap screws opposite the outside end of the wheel plate one-half turn. Tighten the two set screws on the same end one-half turn. Repeat if necessary.

Blade running too high, and against the drive wheel flange- Loosen the cap screws closest to the outside end of the wheel plate and loosen the two set screws at the same time by the same amount. Repeat if necessary.

*Make certain all screws are tight after adjustments have been made.*

## Variable Speed Drive

Model 1316S is equipped with variable speed pulleys providing infinite speed selection between 70 and 375 feet-per-minute. See Cutting Speed Chart for settings.

To vary blade speed, rotate handwheel clockwise to increase speed or counter-clockwise to decrease speed. Do not adjust the speed unless the pulley system is in operation (spinning). The handwheel drag is set at the factory during assembly. This drag prevents handwheel “creep” during operation but still permits easy adjustment. Due to normal wear and environment, the drag setting may change. To readjust, tighten set screw in thrust nut.

## Gear Box Repair

1. Remove gear box from saw.
2. Remove four machine screws holding gear box together.
3. Separate gear box by carefully prying castings apart at a location near pulley shaft. *Caution: Do not use excessive force.*
4. Once the gear box is open, the internal parts may be inspected for wear.
5. Liquid plastic gasket is used to seal the gear case, Loctite No. 51580 or equivalent.
6. Grease, Mobilgrease XHP 220 or equivalent is recommended. The grease must have excellent clinging characteristics. (See Lubrication).

## Fixed Vise Jaw

The two pins in the fixed vise jaw should be kept in place in order to ensure square cuts. For cutting angles, the pins must be removed and the turned to the desired position and tightened with clamp bolts. These pins enable operators to quickly relocate the fixed vise jaw for approximate 90° cutting. For final, accurate cutting, the fixed vise jaw should be squared with the blade. (See Guide Alignment)

## Sliding Vise Jaw

The sliding vise jaw is fitted with a lift plate and ratchet dog for quick action. A hand wheel tightens the vise on the workpiece. *Excessive pressure is not required to hold workpiece securely.*

## Hydraulic Feed Control

The feed rate is hydraulically controlled with a needle valve located on the side of the saw bed.

*Caution: Do not attempt to loosen or remove hoses until the saw frame is supported in its "Down" position.*

## Feed Pressure Adjustment

Maximum feed pressure is obtained with the frame spring adjusted as close to the end of the saw frame as possible. To *decrease* pressure, turn handle on opposite end of frame counterclockwise. To *increase* pressure turn handle in a clockwise direction. Use lighter feed pressure when cutting thin-wall material or irregular shapes.

## Blade Brushes

Brushes should be cleaned frequently in kerosene and reversed to take advantage of both rows of bristles. For efficient cutting and blade life, keep blade brushes adjusted so they are contacting blade teeth and replace them when wore.

## Motor Switch

The "Start-Stop" motor starter is provided with heater coils to de-energize the circuit if an overload occurs. Allow the coil to cool before trying to restart the motor.

Low/No Voltage Control also de-energizes the circuit and prevents automatic restarts after power is restored. Allow the coil to cool.

*To stop the saw at any time,  
press the stop button or  
press down on the limit switch actuator*

## Blade Guide Adjustment

To properly align the saw blade for a straight and accurate cut, do the following:

1. Square the stationary vise jaw. Make sure it is square to the front of the vise slot. Check by placing a combination square against the front of the vise slot in the saw bed. Slide the square toward the stationary vise. Make any necessary adjustment to the vise jaw to bring it into square. Set the combination square so that one leg is along the face of the stationary vise and check to see that the blade is square to the vise jaw. If it is not square, follow the instructions for horizontal adjustment.

2. Vertical Adjustment. The back of the saw blade should just touch the carbide back up guide (item 15 or 23 in the parts drawings) when the saw is running but not cutting. To adjust, loosen the two cap screws 8 [A] and move the block up or down as required. (Before making this adjustment, be sure the back of the blade is properly contacting the flange on both the drive and idle wheels).

3. Horizontal Adjustment. Loosen the two cap screws 8 [B] securing the horizontal adjusting block (items 11 & 12 of the parts drawing). Turn the top adjusting bolt (item 13 of the parts drawing) to move the blade either in, toward the saw bed, or out, away from the saw bed. Normally, the blade comes off the Drive Wheel with a minimum amount of adjustment needed in the Horizontal Adjusting Block. The Idle End adjusting block is more likely to require adjustment.

4. Blade Tilt. To ensure the blade is perpendicular to the bed of the saw, loosen the two cap screw 8 [C] holding the Guide Support (28 & 29 of the parts drawing) and turn the bottom adjusting bolt (13 of the parts drawing). Set the combination square on the saw bed with the end of the rule butted against the blade above the set of the teeth. Use a 1-1/2 thousandths (.0015") shim and slide it along the top and bottom edge of the rule where it meets the saw blade. If the shim slides between the blade and the rule at either the top or bottom, the blade guides must be adjusted.

5. Safety. Ensure that all bolts are properly tightened and that all guards are in place before using the saw.

## Operation of the Swivel Feature for Miter Cutting

The angle of the cut is adjustable from 0° (90°) to 60°. The angle is indicated by a pointer at the back of the chip pan and a large scale on the edge of the cutoff turntable. The saw head is locked into position by means of a control rod and locking block. There is a 0° stop on the back of the saw bed. **DO NOT ADJUST THIS STOP.**

To adjust the angle of the cut, loosen the angle lock handle, pull the saw head, while lining up the pointer to the desired angle shown on the scale. Then gently tighten the handle. The lock requires very little pressure to hold the head in place. **DO NOT OVER TIGHTEN.**

## Stock Stop Feature

The saw is equipped with an adjustable stock stop for use when making repeated cuts of the same length. The stop length is adjusted with the same type of lock used on the saw head angle lock. The stop can be adjusted width-wise using the “T” handle on the lower portion of the support. The stop mechanism can also be swung completely out of the way. To do this, loosen the “T” handle two turns, lift up on the stop and let it down behind the saw.

Recommended Service Kits for Insurance Against Downtime		
1 year		
100133-004	Rotary Blade Brush	1 reqd.
For serial numbers before 6090 and after 6272		
2 year		
100416-001	Bearing	4 reqd.
152153	Top Carbide Guide	2 reqd.
105454-005	VS Belt	1 reqd.
100133-004	Rotary Blade Brush	1 reqd.
100166-450	Blade Brush V Belt	1 reqd.
106317	Fixed Carbide Guide	4 reqd.
101645-FP	Drive Pinion	1 reqd.
For serial numbers between 6090 and 6272		
2 year		
100406-001	Bearing	2 reqd.
100417-001	Bearing	2 reqd.
100416-001	Bearing	2 reqd.
152153	Top Carbide Guide	2 reqd.
105454-005	VS Belt	1 reqd.
100133-004	Rotary Blade Brush	1 reqd.
100166-450	Blade brush V Belt	1 reqd.
106317	Fixed Carbide Guide	4 reqd.
101645-FP	Drive Pinion	1 reqd.

## Maintenance

*Caution: Disconnect the electrical supply and press emergency STOP button before performing any maintenance. DO NOT service the Frame Hydraulic Cylinder or Down Feed Valve unless the frame is in the DOWN position or resting on a mechanical stop, such as a block of wood.*

### Daily

1. Keep the saw clean and free of chips.
2. Maintain the coolant level and keep the coolant tank and filter clean of chip accumulation or sludge.

### Monthly

1. Check, adjust and replace blade brush as needed.
2. Lubricate drive gears
3. Inspect carbide guides and bearings.
4. Inspect drive belt.
5. Clean coolant tank and filter as needed.

### Annually

1. Check hydraulic oil level.
2. Replace guide rollers and carbide inserts.
3. Inspect gear box. Lubricate as needed.

## Lubrication

Correct and adequate lubrication is a very important factor in determining the life and service of your Wellsaw. It is essential that all dust, dirt, chips, [etc. be](#)

thoroughly removed before lubricating the saw. The following lubrication recommendations cover usual saw applications. Heavy use and hostile environments may indicate more frequent lubrication for best saw performance.

### Vise Screw, Ring Gear, Drive Pinion

1. Inspect Monthly.
2. Use anti-seize on Vise Screw and Nut
3. Use Extreme Pressure open gear lube on Ring Gear and Drive Pinion

### Gear Case

1. Inspect after 3 years (6,000 hours).
2. Use Mobilgrease XHP 220 or equivalent.
3. Viscosity: Heavy Grease, drop point 550°F
4. Military Specification: None

### Hydraulic Cylinder

1. Inspect annually. Fill to top of plug. Drain and replace every 5 years (10,000 hours).
2. Fill with Mobil Velocite Oil #6 or equivalent.
3. Viscosity at 100°F: SUS 57-61.
4. Military Specification: None.

### Motor

1. Inspect annually. Re-lubricate every 2 years (4,000 hours) 1 to 2 full strokes.
2. Use Shell Dolium R or equivalent.
3. Viscosity: Heavy Grease, drop point 219°F.
4. Military Specification: None.

## Parts Ordering

For your convenience:

When contacting your Wellsaw supplier or the Company for parts or service, it is essential that you have your saw Model, Serial Number and Purchase Date available.

Jot them down here for handy reference.

**Model:**

**Serial Number:**

**Purchase Date:**

## MACHINE OPERATION

1. Raise the frame and lock it into place by turning the manual flow control valve clockwise (CW) until it stops.

2. Adjust material you plan to saw to the desired cut off length. Turn vise screw handle clockwise (CW) to tighten. Always be sure the material is properly secure before cutting.

3. Push the blade START button to start the machine.

NOTE: If the coolant selector switch is in the ON position, the coolant pump will turn on with the motor. Check to ensure there is adequate coolant in the coolant tank.

4. Adjust feed pressure for the material to be cut. Refer to pages 36 & 37 for the recommended settings.

5. Open the manual flow control valve. Turn it counterclockwise (CCW) to the desired feed rate.

NOTE: When breaking in a new blade, always reduce the frame feed rate to one half (1/2) the normal rate of descent.

6. The saw will automatically shut off at the end of the cut. Raise the frame and lock it in to place. Repeat the above operation for additional operations.

NOTE: The saw may be turned off at any time during the cutting operation by pressing the STOP button on the operator control panel or by pressing the KILL SWITCH (frame down limit switch) on the front of the machine.


## One Year Limited Warranty

This Wellsaw is warranted against defects in material and workmanship installed or performed at our factory. Within one year from the date of purchase, we will, free of charge, at our option, either repair or replace any part of the Wellsaw which our examination discloses to be defective because of workmanship or a defect in material, and to make any necessary service adjustments as required. This warranty does not apply if the Wellsaw has been subject to accident, alteration, abuse, misuse or which fails due to lack of care or as the result of inadequate power supply and specifically does not apply to normal wear of moving parts such as bearings, gears, pinion or blade. *There is no warranties beyond the description on the face hereof.* Wellsaw shall not be liable for consequential or incidental damage suffered or incurred with respect to defective material or workmanship.

All transportation costs or parts submitted to Wellsaw under this warranty must be paid by the saw's owner. No products or parts are to be returned to our factory without first obtaining written permission.

NOTE: Be sure to fill out and return the Warranty Card provided with this Wellsaw.

# Frame Assembly

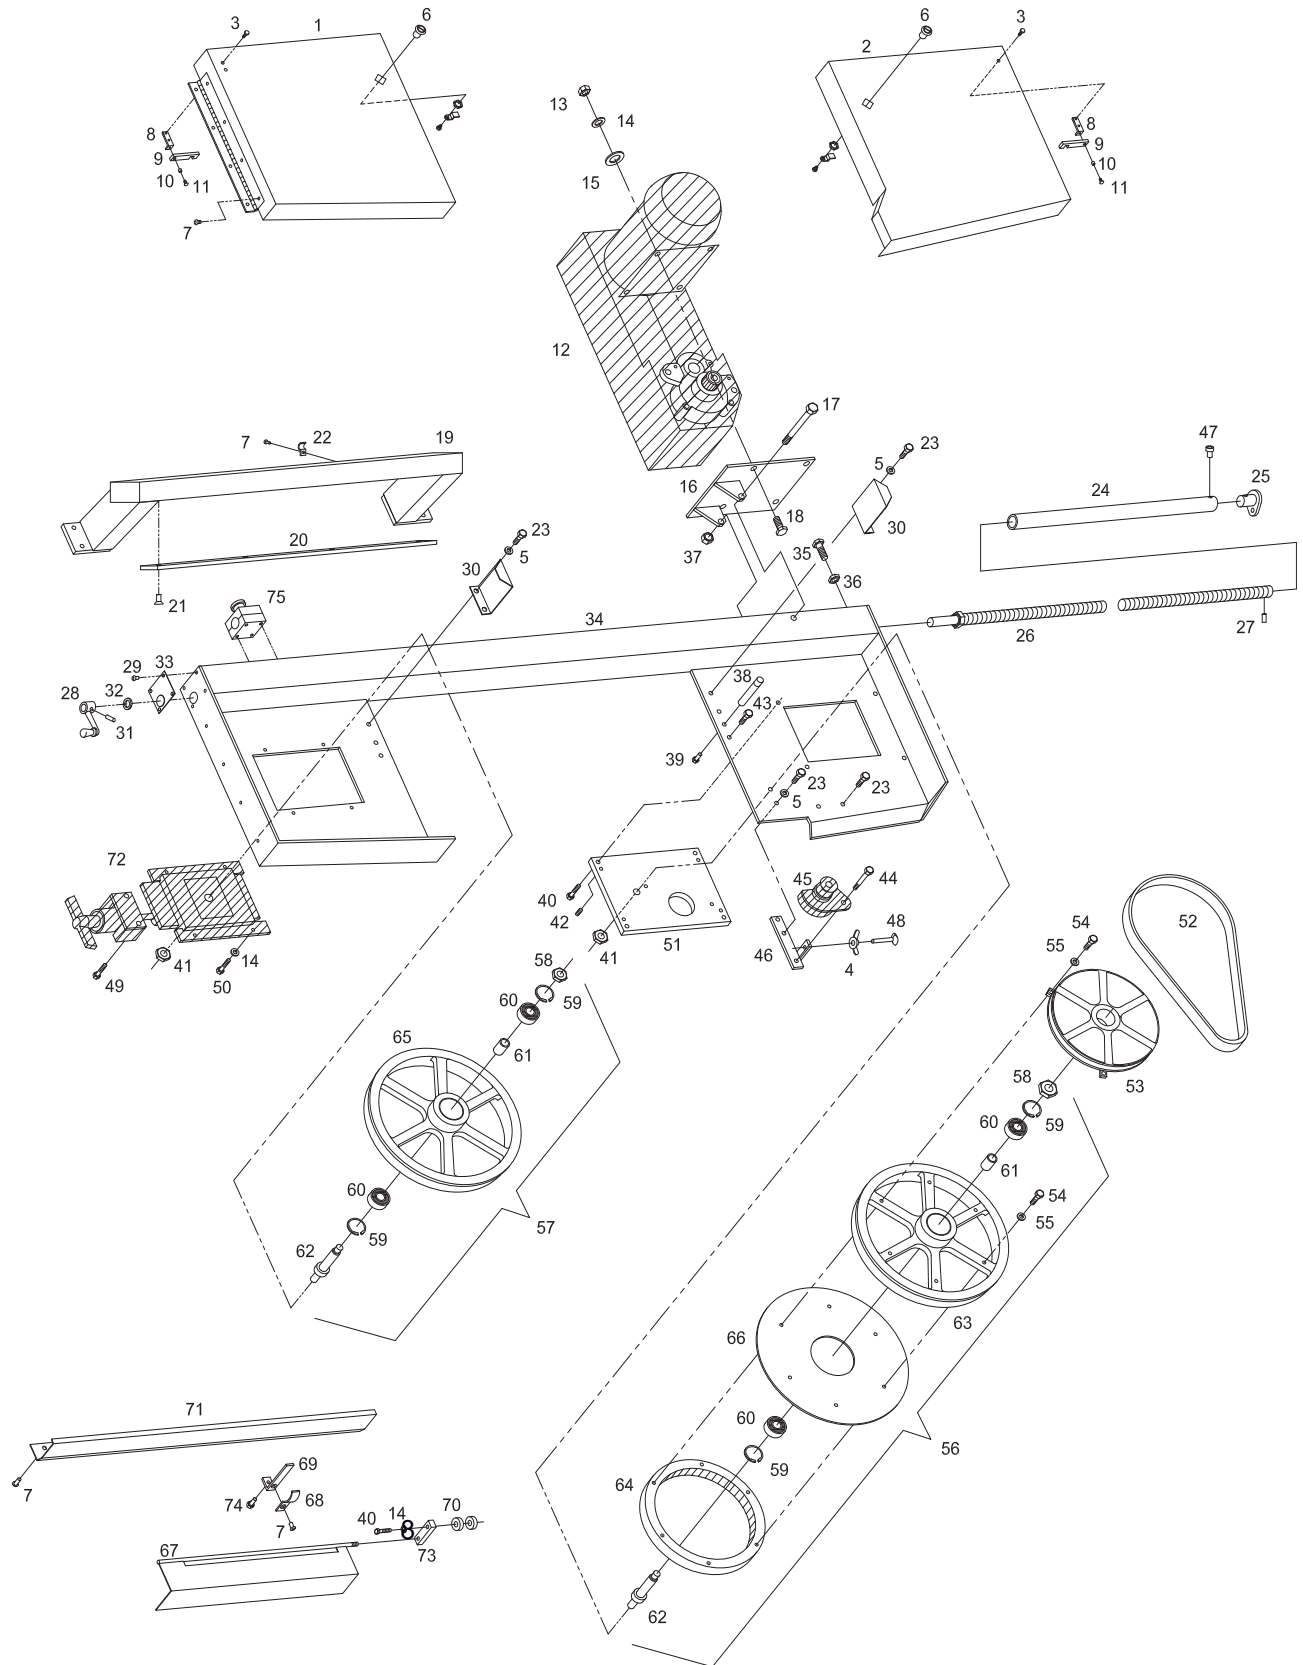




## Frame Assembly

1	150146SERV	Idle Wheel Guard	42	100034-005	Set Screw, 5/16-18 x 3/4
2	150147SERV	Drive Wheel Guard	43	100004-015	Capscrew, HH 5/16-18 x 3/4
3	100013-005	Machine Screw, BH 10-32 x 3/8	44	100165-015	Shoulder Bolt, 3/8-16 x 1-3/4
4	100024-002	Wing Nut, 1/4-20	45		<b>Blade Brush Ass'y. (page 31)</b>
5	100025-003	Lockwasher, 3/8	46	150369	Blade Brush Arm
6	100135-002	1/4 Turn Fastener w/cam	47	100008-018	Capscrew, Soc Hd 5/16-18 x 3/4
7	100013-010	Machine Screw, BH 1/4-20 x 1/4	48	100042-003	Thumb Screw, 1/4-20 x 2
8	150095	Door Catch Mtg Block	49	100004-055	Capscrew, HH 3/8-16 x 2-1/4
9	150096	Door Catch	50	100004-013	Capscrew, HH 5/16-18 x 5/8
10	150182	Door Catch Sleeve	51	150022	Wheel Plate, Drive End
11	100013-009	Machine Screw, BH 10-32 x 1/2	52	100166-450	V- Belt
12		<b>Motor &amp; Gear Box Ass'y. (page 28)</b>	53	150144	Pulley, Large
13	100017-002	Hex Nut, 5/16-18	54	100004-068	Capscrew, HH 1/4-20 x 1-1/4
14	100025-002	Lock Washer, 5/16	55	100025-001	Lockwasher, 1/4
15	100029-003	Flat Washer, 5/16	56	<b>150087</b>	<b>Drive Wheel Ass'y for 1" Blades</b>
16	150248	Motor Mount Bracket			<b>(includes 41,54,55,58-64, &amp; 66)</b>
17	100004-116	Capscrew, HH 1/2-13 x 4-1/2	57	<b>150088</b>	<b>Idle Wheel Ass'y for 1" Blades</b>
18	100004-016	Capscrew, HH 5/16-18 x 7/8			<b>(includes 41,58-62 &amp; 65)</b>
19	150280	Guide Beam Ass'y (standard 1316S)	58	100019-016	Hex Jam Nut, 5/8-18
	150318	Guide Beam Assy (1316S-EXT)	59	100068-002	Snap Ring (2 req'd/ wheel)
20	150124	Guide Arm Track (standard 1316S)	60	100414-003	Ball Bearing (2 req'd/ wheel)
	150320	Guide Arm Track (1316S-EXT)	61	105415	Spacer (1 req'd/ axle)
21	100009-013	Capscrew, FH 5/16-18 x 1/2	62	105420	Wheel Axle
22	100218-010	Clamp	<b>63</b>	<b>150059-001</b>	<b>Drive Wheel for 1" Blade</b>
23	100004-076	Capscrew, HH 3/8-16 x 3/4			<b>(includes items 59 thru 61)</b>
24	150104	Counter Balance Arm & Sleeve	64	B-086	Internal Ring Gear
25	150411	Counter Bal Spring Attach.(1316S)	<b>65</b>	<b>150060-001</b>	<b>Idle Wheel for 1" Blade</b>
	150336	Counter Bal Spring Attach. (EXT)			<b>(includes items 59 - 61)</b>
26	150114	Counter Balance Screw (1316S)	66	150405	Shield
	150315	Counter Balance Screw (EXT)	67	150157	Blade Guard Lower (standard 1316S)
27	100053-021	Roll Pin, 3/16 x 7/8		150321	Blade Guard Lower (1316S-EXT)
28	150476	Crank	68	150414	Clamp
29	100049-001	Drive Screw #4	69	150154	Blade Guard Support
30	155152	Door Catch Support	70	105537	Spacer
31	100053-015	Roll Pin, 1/8 x 1"	71	150273	Blade Guard, upper (standard 1316S)
32	100030-007	Flat Washer, 1/2 SAE		150314	Blade Guard, upper (1316S-EXT)
33	150231	Cutting Pressure Label	<b>72</b>		<b>Rite Tension® Blade Tension &amp; Slide</b>
34	153085	Saw Frame (standard 1316S)			<b>Blockn Ass'y (see page 26)</b>
	150316	Saw Frame (1316S-EXT)	73	150158	Blade Guard Mounting Block
35	100004-030	Capscrew, HH 3/8-16 x 1-1/2	74	100013-002	Cap Screw, BH, 1/4-20 x 3/4
36	100019-004	Hex Nut, 3/8-16	75	100871-014	Emergency stop switch
37	100023-004	Nylon Lock Nut, 1/2-13	76	<b>100781-011</b>	<b>Worklight (not pictured)</b>
38	150160-002	Door Latch Stud			
39	100004-015	Capscrew, HH 5/16-18 x 3/4			
40	100004-020	Capscrew, HH 5/16-18 x 1-1/4			
41	100065-007	Hex Nut, 5/8-18			



# BED ASSEMBLY

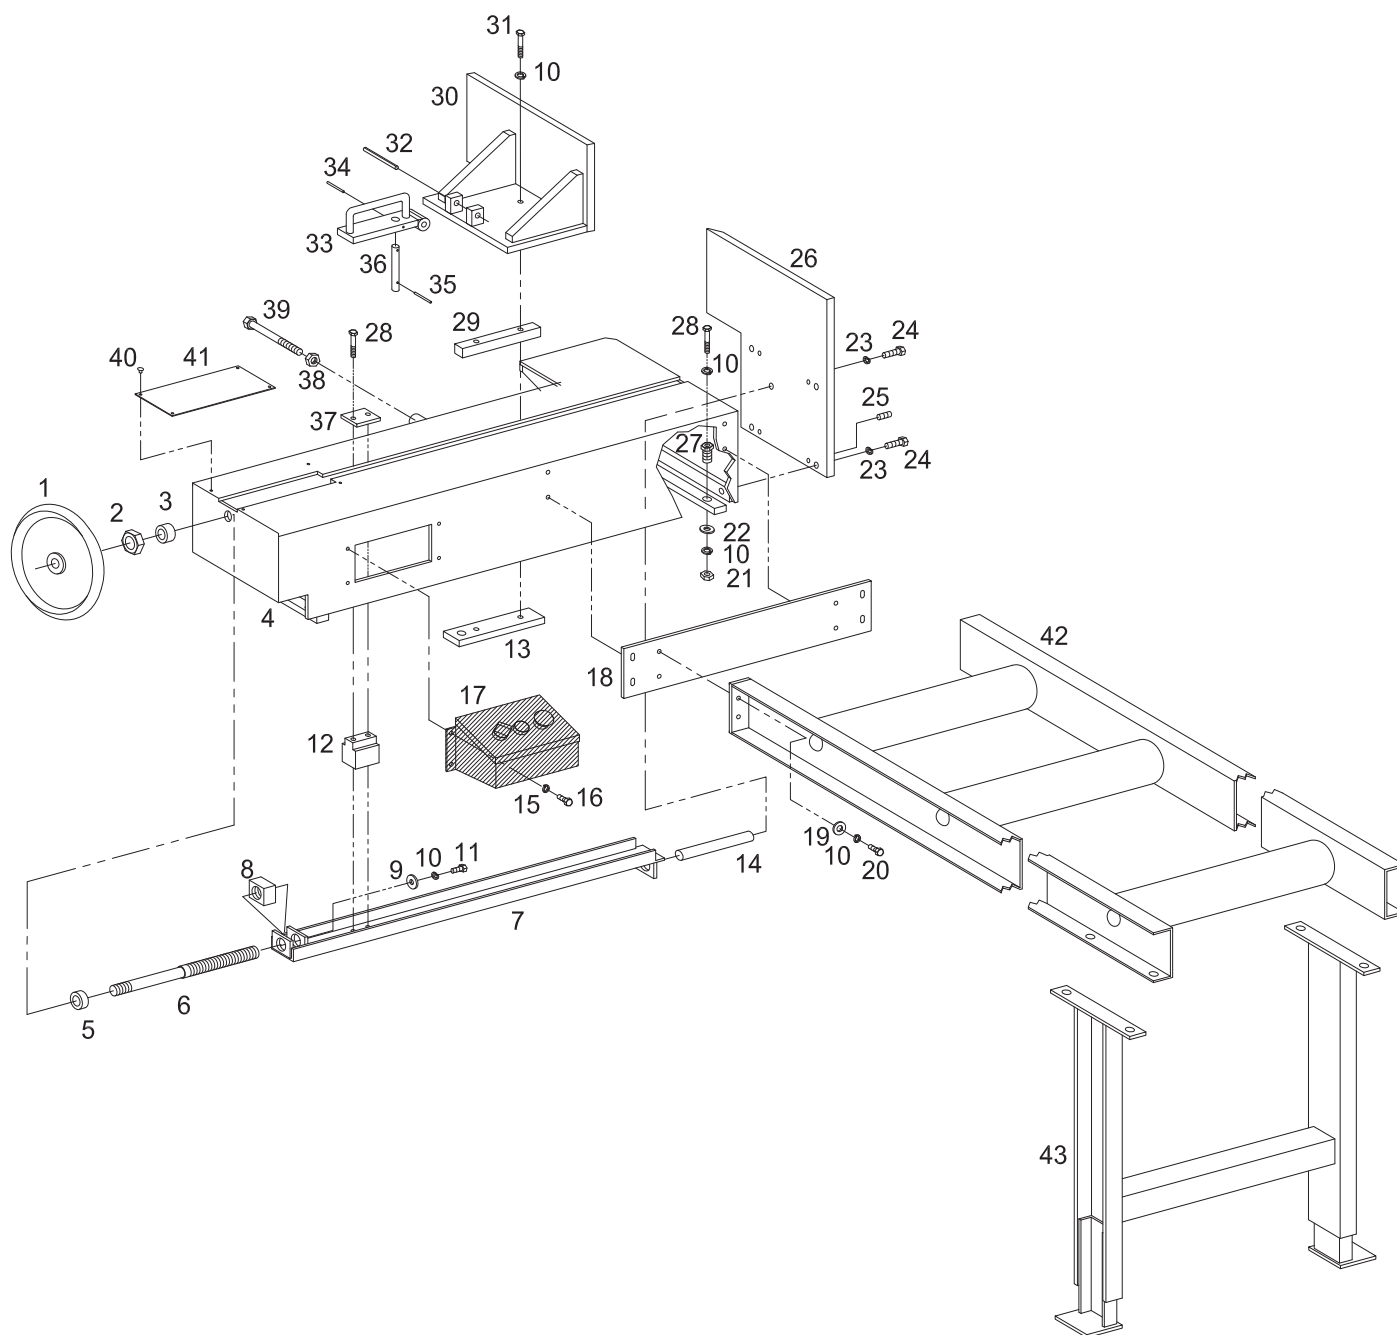


## Bed Assembly

1	B-093	Hand Wheel
2	100019-028	Hex Jam Nut, 3/4-10
3	102886	Set Collar
4	153011	Saw Bed
5	100402	Thrust Collar
6	150286	Vise Screw
7	153026	Vise Push Channel
8	M-061B	Vise Nut
9	M-041	Guide Washer
10	100025-002	Lock Washer, 5/16"
11	100004-015	Cap Screw, 5/16-18 x 3/4"
12	150098	Slide Block
13	153082-001	Slide Block Plate (up to sn 6049)
	153082-002	Slide Block Plate (starting sn 6050)
14	153054	Push Channel Support Rod
15	100025-001	Lock Washer, 1/4"
16	100004-005	Cap Screw, 1/4-20 x 5/8"
17		<b>Control Switch Assembly (See Page 32)</b>
18	153073	Conveyor Mounting Plate
19	100030-007	Flat Washer, 1/2"
20	100004-011	Cap Screw, 5/16-18 x 1"
21	101300	Hex Nut, 5/16-18
22	100030-007	Flat Washer, 1/2"
23	100025-003	Lock Washer, 3/8"
24	100004-029	Cap Screw, 3/8-16 x 1-1/4"
25	100034-005	Set Screw, SH, 5/16-18 x 3/4"
26	153010	Stationary Vise Jaw
27	210273	Adjustment Screw
28	100004-099	Cap Screw, 5/16-18 x 2-1/4
29	153078	Vise Jaw Key
30	153005-001	Moveable Vise Jaw (up to sn 6049)
	153005-002	Moveable Vise Jaw (starting sn 6050)
31	100004-023	Cap Screw, 5/16-18 x 2"
32	100053-002	Roll Pin, 3/8 x 2-1/2"
33	150091	Lift Plate
34	100053-008	Roll Pin, 1/8 x 1-3/8"
35	100053-009	Roll Pin, 1/8 x 5/8"
36	150094	Vise Drive Pin
37	150097	Clamp Plate
38	100019-005	Heavy Hex Jam Nut, 1/2-13
39	100008-081	Cap Screw, SH, 1/2-13 x 4-1/2"
40	100000-018	Machine Screw, RH, 10-32 x 3/8"
41	153056	Bed Cover Plate
42	098045-001	Gravity Conveyor
43	098046-004	Leg Assembly

# Table Assembly


use threadlock on  
these screws ->

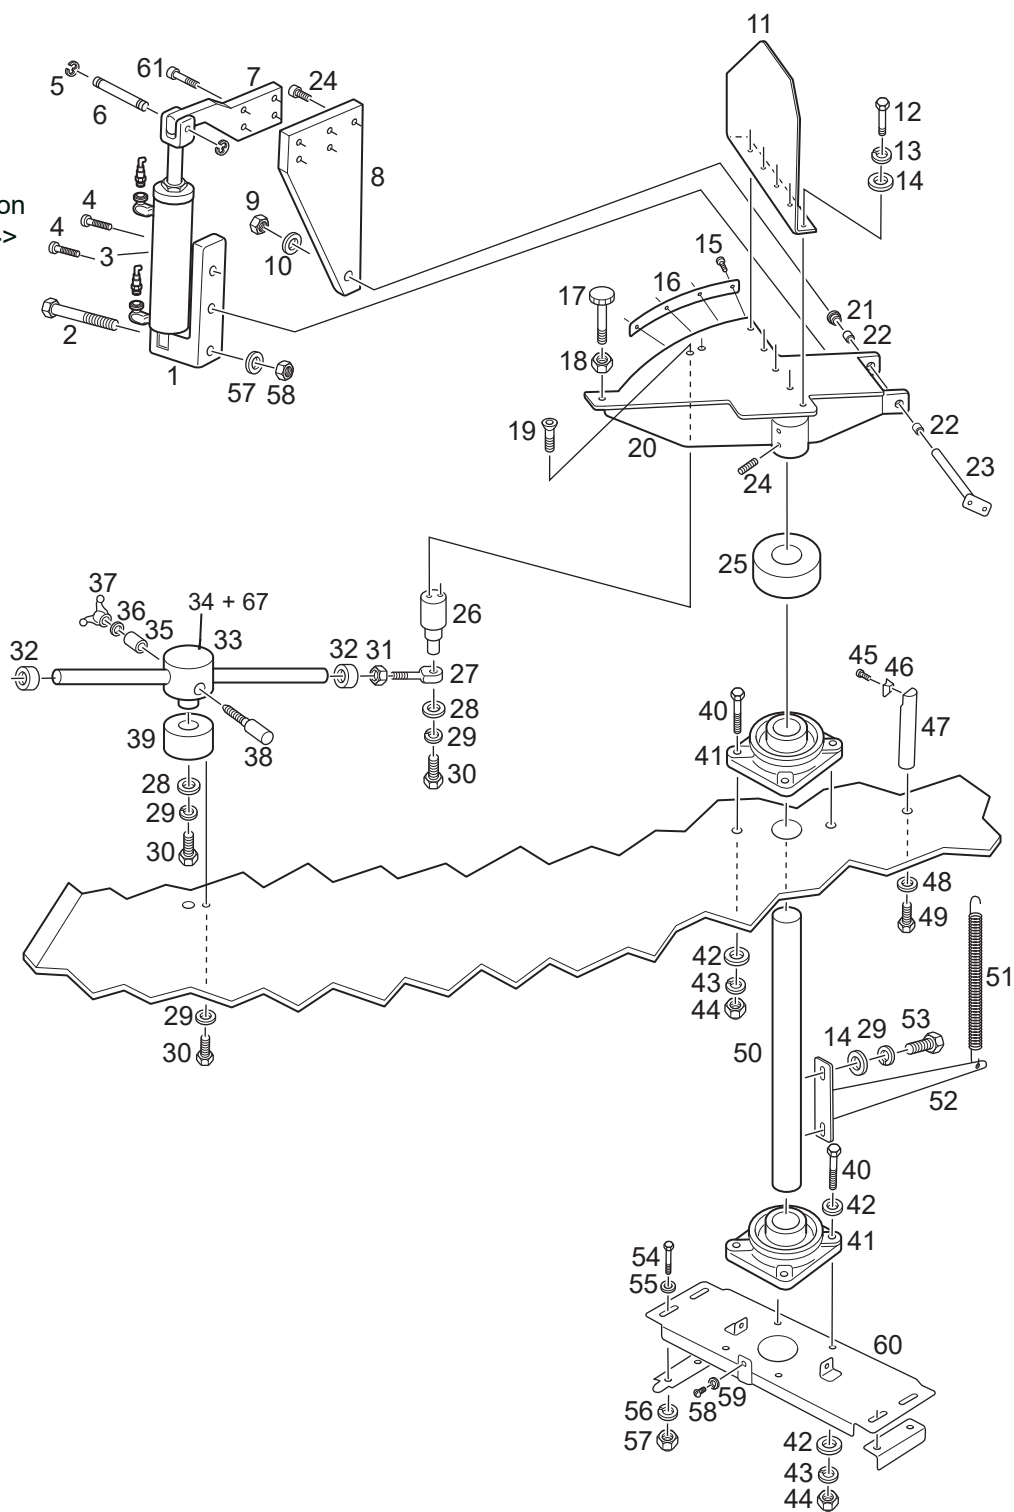

## Table Assembly

1	153051	Lower Cylinder Mount	46	210335	Pointer
2	100004-052	Cap Screw, 3/8-16 x 3-1/2"	47	153080	Pointer Rod
3		<b>Cylinder Assembly (See Page 20)</b>	48	100029-004	Flat Washer, 3/8
4	100009-016	Cap Screw, FH, 3/8-16 x 1-1/2"	49	100004-076	Cap Screw, HH, 3/8-16 x 3/4"
5	100069-019	Snap Ring	50	153055	Post Frame Support
6	150279	Clevis Pin	51	150119	Spring before s/n 6573
7	150274	Upper Cylinder Mount		150119	EXTENDED SAW USES 2
8	150275	Pivot Arm		150466	Spring after s/n 6573
9	100017-007	Lock Nut, 5/8-11	52	153030	Spring Anchor before s/n 6573
10	100029-008	Flat Washer, 5/8			<b>after s/n 6573 use these (not pictured)</b>
11	153057	Stock Guide		153108	Spring Anchor arm, inboard
12	100004-007	Cap Screw, HH, 1/4-20 x 3/4"		153105	Spring Anchor arm, outboard
13	100025-001	Lock Washer, 1/4		100042-008	Thumb Screw
14	100029-002	Flat Washer, 1/4		150500	Spring Link
15	100013-005	Cap Screw, BH, 10-32 x 3/8"		100165-011	Shoulder Bolt
16	153025	Protractor		100023-007	Nylon lock nut
17	104604	Adjusting Screw	53	100004-018	Cap Screw, HH, 5/16-18 x 1"
18	101300	Hex Nut, 5/16-18	54	100004-027	Cap Screw, HH, 3/8-16 x 1"
19	100009-006	Cap Screw, FH, 3/8-16 x 1"	55	100029-004	Flat Washer, 3/8
20	153040	Tip Off Table	56	100025-003	Lock Washer, 3/8
21	150021-001	Pivot Bar Collar	57	100015-017	Hex Nut, 3/8-16
22	100419-041	Sleeve Bearing	58	100004-053	Cap Screw, 1/4-20 x 1"
23	150276	Pivot Bar	59	100025-001	Lock Washer, 1/4
24	100039-004	Set Screw, SH, 3/8-16 x 1"	60	153034	Lower Bearing Mount
25	153024	Flange Bearing Cover	61	100008-016	Cap Screw, SH, 3/8-16 x 1-3/4
26	153035	Table Lock Bar	62	100008-006	Cap Screw, SH, 3/8-16 x 1
27	098081	Ball Joint	63	100004-039	Cap Screw, HH, 1/2-13 x 2"
28	M-041	Guide Washer	64	100030-007	Flat Washer, 1/2
29	100025-002	Lock Washer, 5/16	65	100025-005	Lock Washer, 1/2
30	100004-015	Cap Screw, HH, 5/16-18 x 3/4"	66	100019-027	Hex Jam Nut, 1/2-13
31	100019-016	Hex Nut, 5/8-18	67	100243-003	Grease fitting on table lock swivel
32	098030-011	Steel Shaft Collar			
33	153039	Shaft for Table Lock			
34	153037	Table Lock Swivel			
35	155190-001	Wedge			
36	100030-005	Flat Washer, 3/8			
37	155205-002	Wing Nut			
38	155203	Wedge and Bolt Assembly			
39	153036	Base to Table Lock			
40	100004-043	Cap Screw, HH, 5/8-11 x 2-1/2"			
41	100452-002	Flange Bearing			
42	100030-009	Flat Washer, 5/8			
43	100025-007	Lock Washer, 5/8			
44	100019-027	Hex Jam Nut, 5/8-11			
45	100013-005	Cap Screw, BH, 10-32 x 3/8"			


# BASE ASSEMBLY

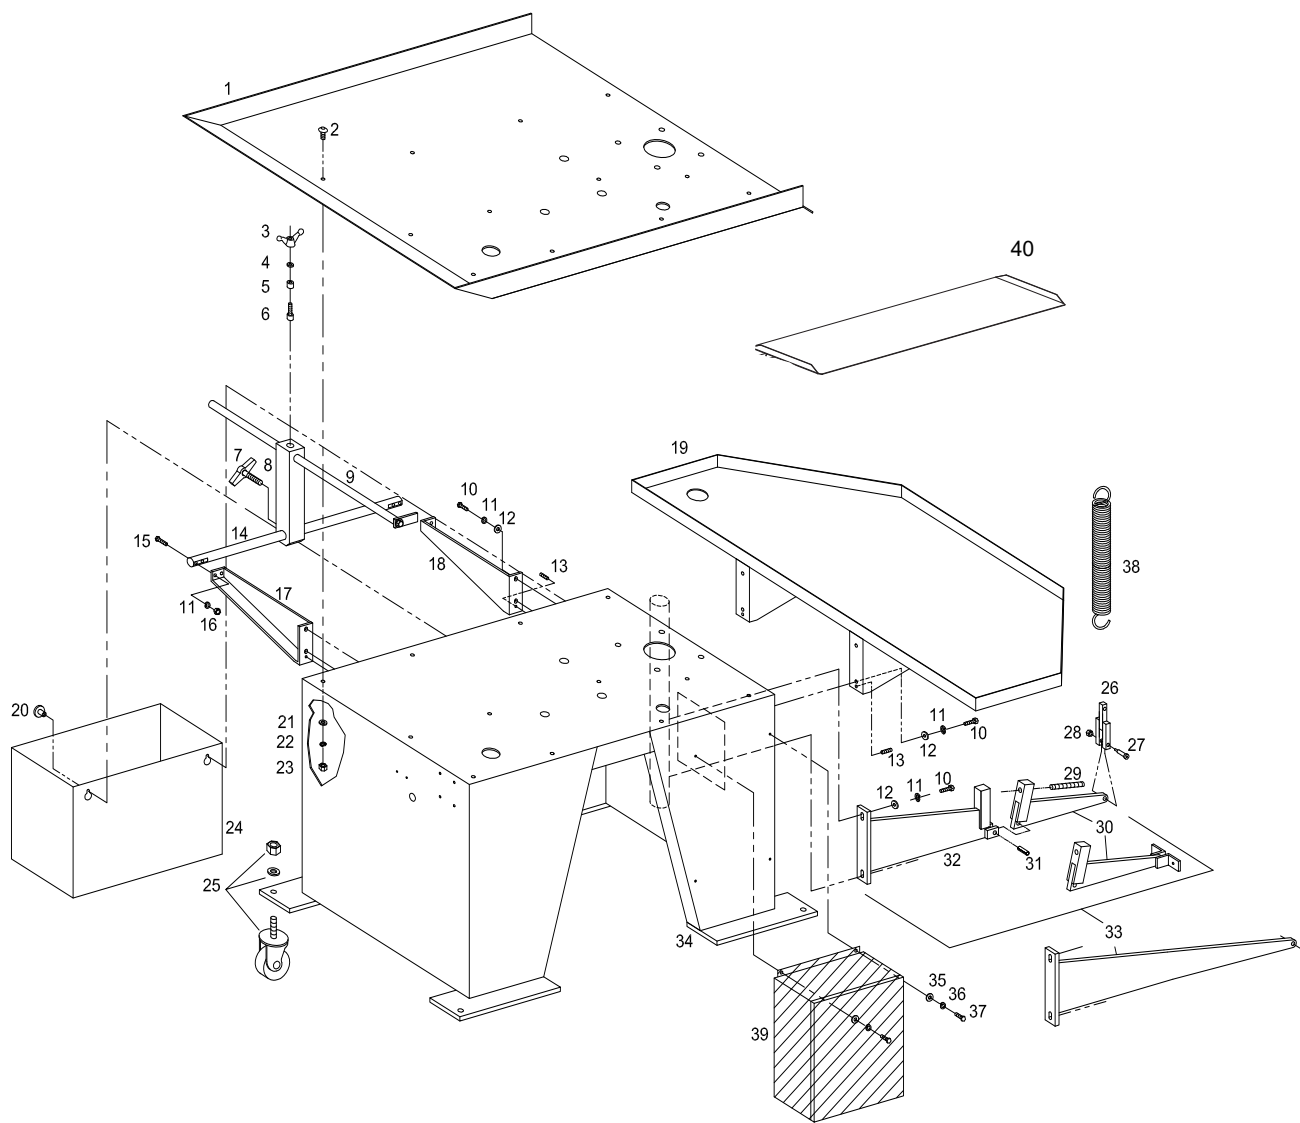

## BASE ASSEMBLY

1	153023	CHIP PAN
2	100013-015	CAP SCREW, BH, 3/8/16 x 1"
3	155205-002	WING NUT
4	100030-005	FLAT WASHER , 3/8 SAE
5	155190-001	WEDGE
6	155203	WEDGE & BOLT ASSEMBLY
7	155201	HANDLE & SCREW ASSEMBLY
8	153060	BAR & STOCK STOP
9	153076	STOCK STOP ROD
10	100004-018	CAP SCREW, HH 5/16-18 X 1"
11	100025-002	LOCK WASHER , 5/16
12	100030-004	FLAT WASHER, 5/16
13	100034-005	SET SCREW, 5/16-18 X 3/4"
14	153067	STOCK STOP ROD
15	100004-020	CAP SCREW, HH 5/16-18 X 1-1/4"
16	100017-002	HEX NUT, 5/16-18
17	153065	STOCK STOP SUPPORT, RH
18	153066	STOCK STOP SUPPORT, LH
19	153031	LOWER CHIP PAN
20	150078	COOLANT TANK HANGER
21	100030-005	FLAT WASHER, 3/8 SAE
22	100025-003	LOCK WASHER , 3/8
23	100015-017	HEX NUT, 3/8-16
24	150066	<b>COOLANT TANK (SEE PAGE 30)</b>
25	100113-003	CASTER SET ( 2 LOCKING, 2 NON-LOCKING) OPTIONAL
26	150500	SPRING ANCHOR LINK (NOT USED ON EXTENDED SAW)
27	100165-011	SHOULDER BOLT, 3/8 X 1-1/2"
28	100023-007	NYLON LOCK NUT
29	100033-025	SQUARE HEAD SET SCREW, 1/2-13 X 4
30	153105	SPRING ANCHOR ARM, OUTBOARD AFTER S/N 6573
	153105-001	SPRING ANCHOR ARM FOR EXTENDED SAW AFTER S/N 6573
31	100053-041	ROLL PIN, 3/8 X 1-1/4
32	153108	SPRING ANCHOR ARM, INBOARD AFTER S/N 6573
33	153030-002	SPRING ANCHOR ASSY AFTER S/N 6573 (INCLUDES ITEMS 29-32)
	153030-003	DOUBLE SPRING ANCHOR ASSY (EXTENDED SAW AFTER S/N 6573)
	153030	SPRING ANCHOR (BEFORE S/N 6573)
	153030-001	DOUBLE SPRING ANCHOR (EXTENDED SAW BEFORE S/N 6573)
34	153022	LEG WELDMENT
35	100029-002	FLAT WASHER , 1/4 USS
36	100025-001	LOCK WASHER, 1/4
37	100004-004	CAP SCREW, HH, 1/4-20 X 1/2
38	150466	SPRING for Standard saw after sn 6574
	150119	SPRING (standard before S/N 6573) EXTENDED USES 2 OF THESE
39		<b>ELECTRICAL BOX (SEE PAGE 32)</b>
40	M-250	SPLASH GUARD
41	152245	DRAIN SCREEN
42	152246	DRAIN BRACKET

# Down Feed Assembly

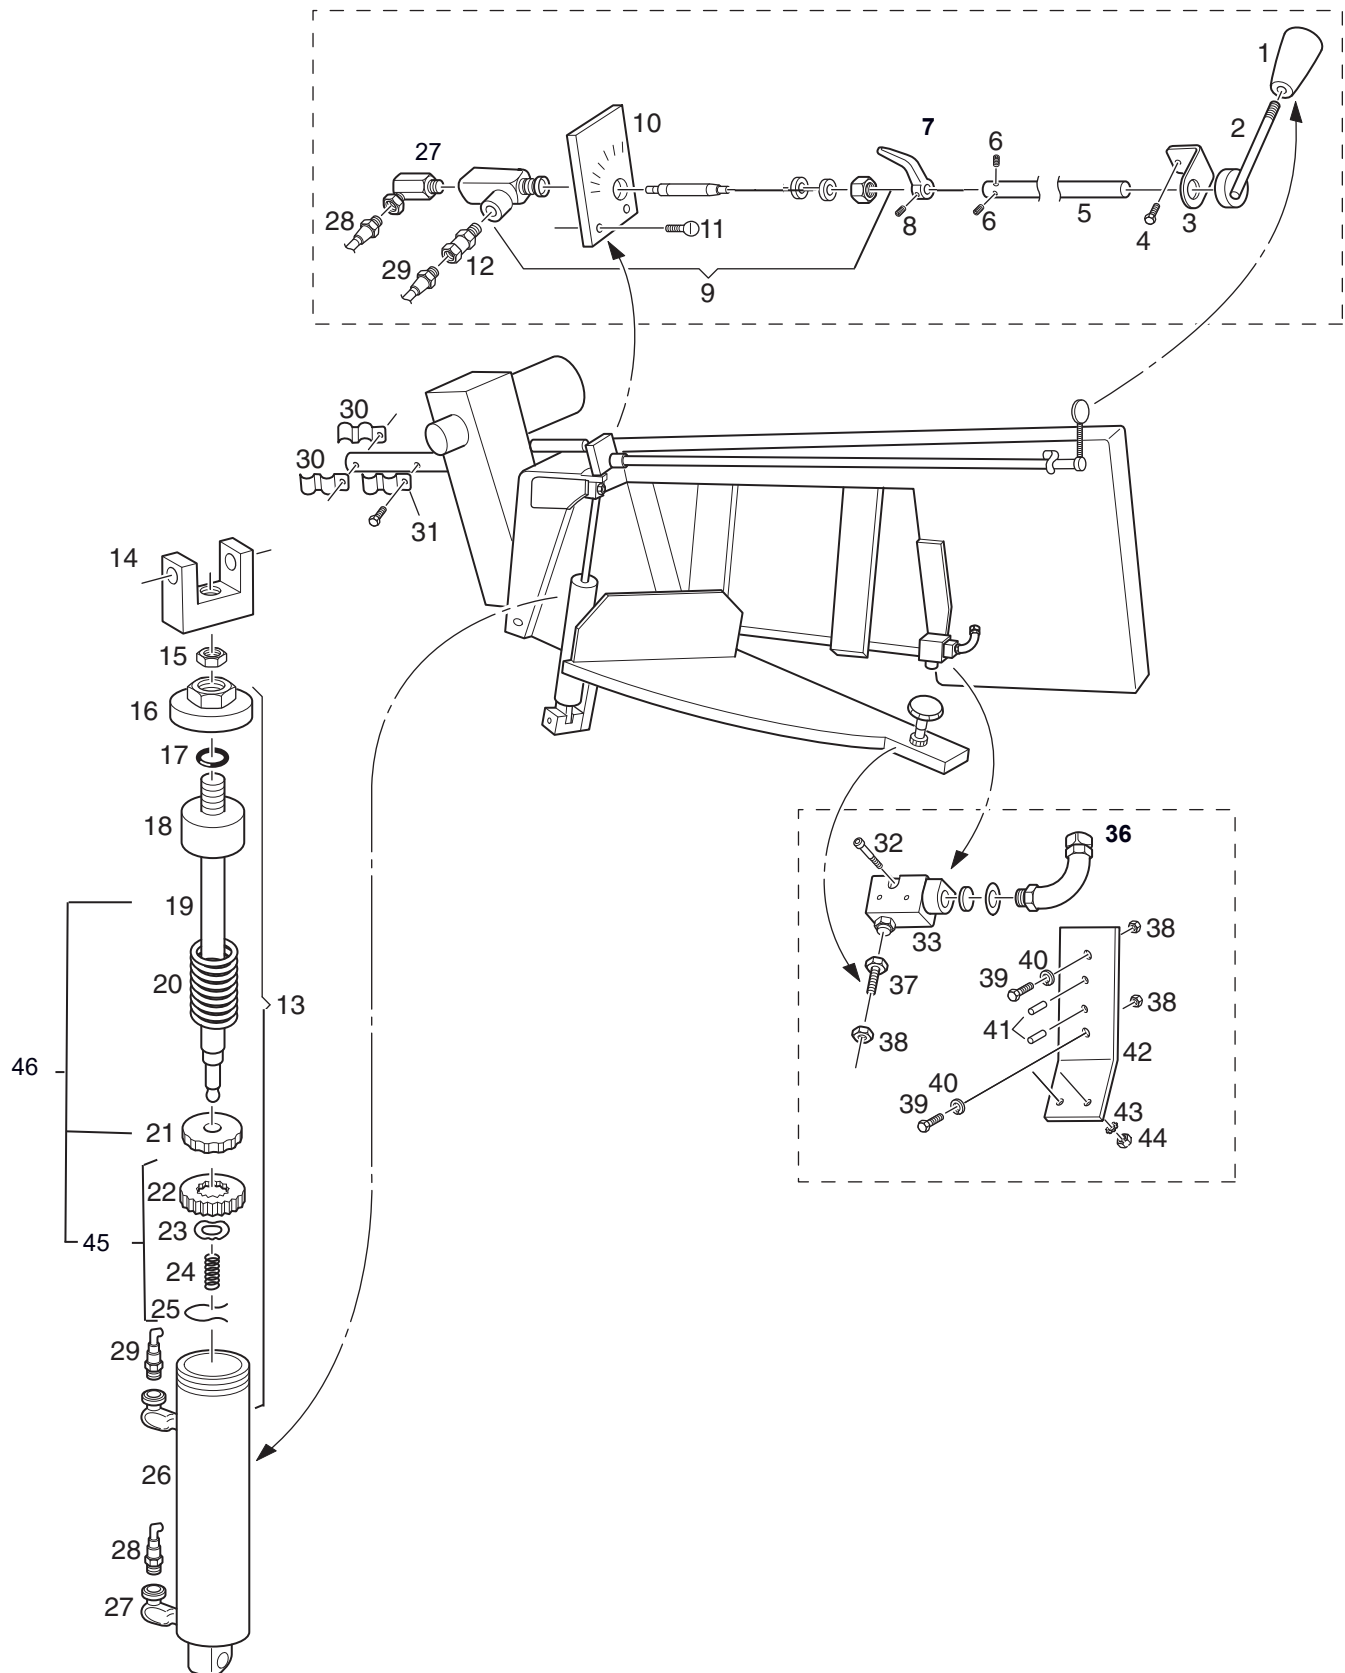




## Down Feed Assembly

1	100139-001	Oval Knob
2	153047	Handle
3	153077	Rod Support
4	100013-005	Cap Screw, BH, 10-32 x 3/8"
5	153069	Feed Rod
6	100034-039	Cap Screw, SH, 10-32 x 3/8"
7	150278	Pointer
8	100034-049	Cap Screw, SH, 10-32 x 1/8"
9	100238-005	Feed Control Valve does not include # 10 or #11
10	153064	Feed Control Dial
11	100013-006	Cap Screw, BH, 1/4-20 x 1/2"
12	100329-001	Hose Connector
13	<b>155180-001</b>	<b>Cylinder Assembly (Includes items 16 - 27)</b>
45	<b>155256</b>	<b>Cylinder Service Kit (includes items 17 &amp; 22-25)</b>
46	<b>155221</b>	<b>Piston Rod Assembly (Includes items 19 + 21 - 25)</b>
14	150218	Clevis
15	100019-026	Heavy Hex Jam Nut, 1/2-20
16	155157	Cylinder Cap
17	155156	O-Ring
18	153092	Spacer
19	155182	Piston Rod
20	155159	Spring
21	155160	Aluminum Washer
22	155161	Piston Cup
23	100028-006	Shake Proof Washer
24	155163	Spring
25	155164	Hitch Clip
26	155181	Cylinder includes top fitting
27	100313-001	90 degree Swivel Fitting
28	100331-046	Hydraulic Hose Assembly, 36"
29	100331-045	Hydraulic Hose Assembly, 31"
30	100218-018	Jiffy Clip, #115
31	100218-014	Jiffy Clip, #125
32	100008-088	Cap Screw, SH, 6-32 x 1-3/4"
33	100782-012	Limit Switch
34	100606-001	Sealing Ring
35	100240-001	Conduit Lock Nut
36	100612-006	Elbow, 90 degree
37	104604	Adjustment Screw
38	101300	Hex Nut, 5/16-18
39	100004-018	Cap Screw, HH, 5/16-18 x 1"
40	100025-002	Lock Washer, 5/16
41	100053-015	Roll Pin, 1/8 x 3/4
42	153058	Frame Stop
43	100026-001	Shake Proof Washer, #6
44	100015-005	Hex Nut, 6-32

\* **FOR EXTENDED HEAD PARTS (1-6) SEE PAGE 35**

# Blade Guides for 1" Blade

For serial numbers between 6090 and 6272

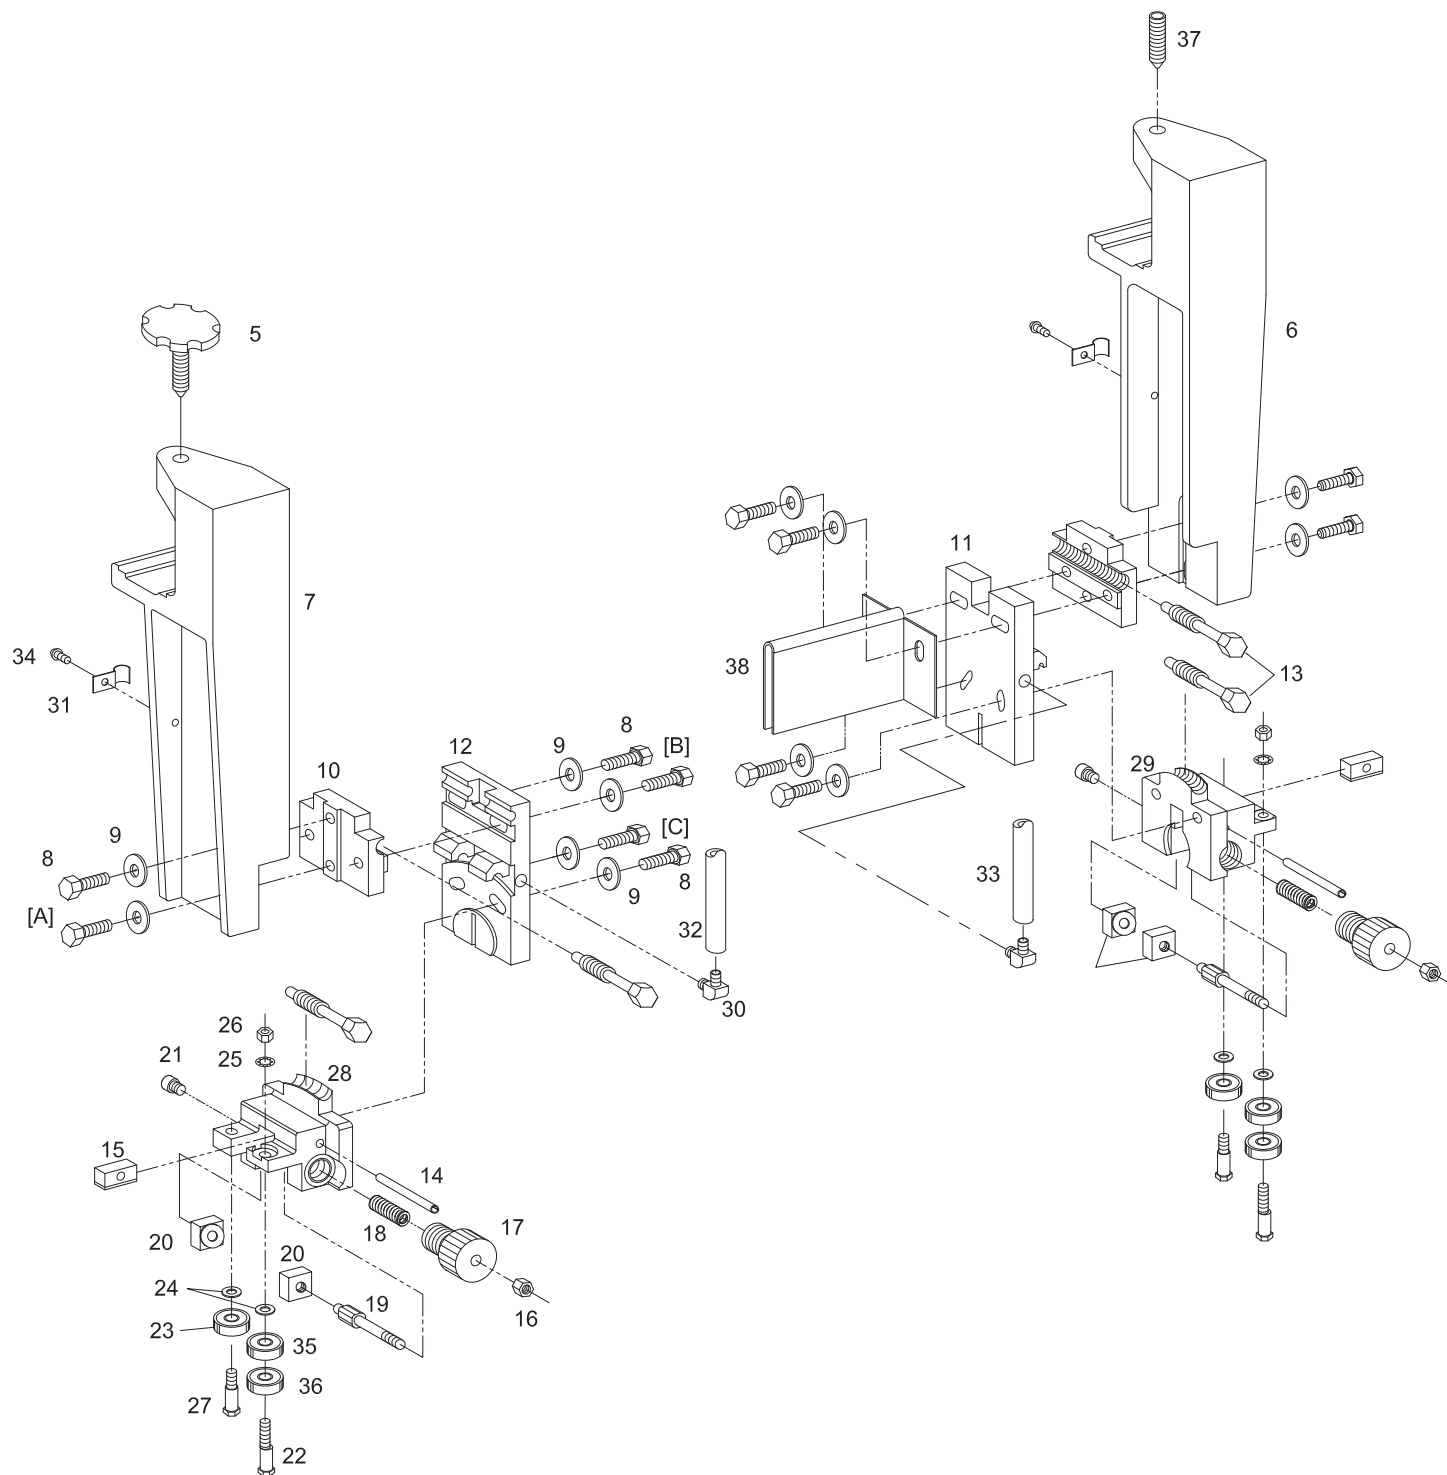


For serial #'s between 6090 and 6272. Serial numbers before and after, use single bearings 100416-001 (SEE NEXT PAGE)

## Blade Guides for 1" Blade

- 1 **152158-003** **Blade Guide Ass'y, D.E. between 6090 and 6272**  
(includes items 5 - 31& 35 - 37, minus 7,12,& 28)
- 2 **152158-005** **Blade Guide Assy, D.E. before 6090 and after 6272**
- 3 **152159-003** **Blade Guide Ass'y, I. E. between 6090 and 6272**  
(includes items 5 thru 31& 35 - 37 minus 6,11& 29)
- 4 **152159-001** **Blade Guide Assy, I.E. before 6090 and after 6272**
- 5 **152160-003** **Guide Support Ass'y, D.E. between 6090 and 6272**  
(includes items 13 thru 27 plus 29, 36 & 37)
- 6 **152160-001** **Guide Support Assy, D.E. before 6090 and after 6272**
- 7 **152161-003** **Guide Support Ass'y, I.E. between 6090 and 6272**  
(includes items 13 thru 28 plus 36 & 37)
- 8 **152161-001** **Guide Support Assy, I.E. before 6090 and after 6272**
- 9 105335-001 Hand Wheel & Screw
- 10 152118 Roller Guide Bracket, D.E.
- 11 152117 Roller Guide Bracket, I.E.
- 12 100004-018 Cap Screw, HH 5/16-18 x 1
- 13 100029-002 Flat Washer, 1/4
- 14 152155 Vertical Adjusting Block
- 15 152121-002 Horizontal Adjusting Block, D.E.
- 16 152121-003 Horizontal Adjusting Block, I.E.
- 17 152151 Adjusting Bolt
- 18 100053-036 Roll Pin, 1/4 x 2 (later S/N's)
- 19 152153 Carbide Back up Guide Block
- 20 100023-006 Nylon Lock Nut, 1/4-20
- 21 152156 Adjusting Knob
- 22 100136-009 Spring
- 23 152157 Stud
- 24 106317 Fixed Carbide Guide
- 25 100008-004 Cap Screw, HH 5/16-18 x 5/8
- 26 150465 Eccentric Roller Axle between 6090 and 6272
- 27 B-109 Eccentric Roller Axle before 6090 and after 6272
- 28 100416-001 Bearing s/n before 6090 and after 6272 uses 4 of these and no others
- 29 100097-001 Roller Guide Washer
- 30 100027-005 Lock Washer, Shakeproof
- 31 101300 Hex Nut, 5/16-18
- 32 B-043 Roller Axle
- 33 152119 Guide Support, I.E.
- 34 152120 Guide Support, D.E.
- 35 100324-009 Hose Barb, 1/4" hose, 90 deg
- 36 100218-018 Tubing Clamp, 3/8
- 37 100350-018 Coolant Hose, D.E. 1/4" x 18"
- 38 100350-040 Coolant Hose, I.E. 1/4" x 40"
- 100350-068 Coolant Hose, I.E. for 1316S-EXTEND 1/4" x 68"
- 100013-005 Machine Screw, BH 10-32 x 3/8
- 100417-001 Bearing only used between 6090 and 6272
- 100406-001 Bearing only used between 6090 and 6272
- 100035-013 Set screw
- 150484 Blade Guard

# Blade Guides for 1" blades

FOR SERIAL NUMBERS BEFORE 6090 AND AFTER 6272

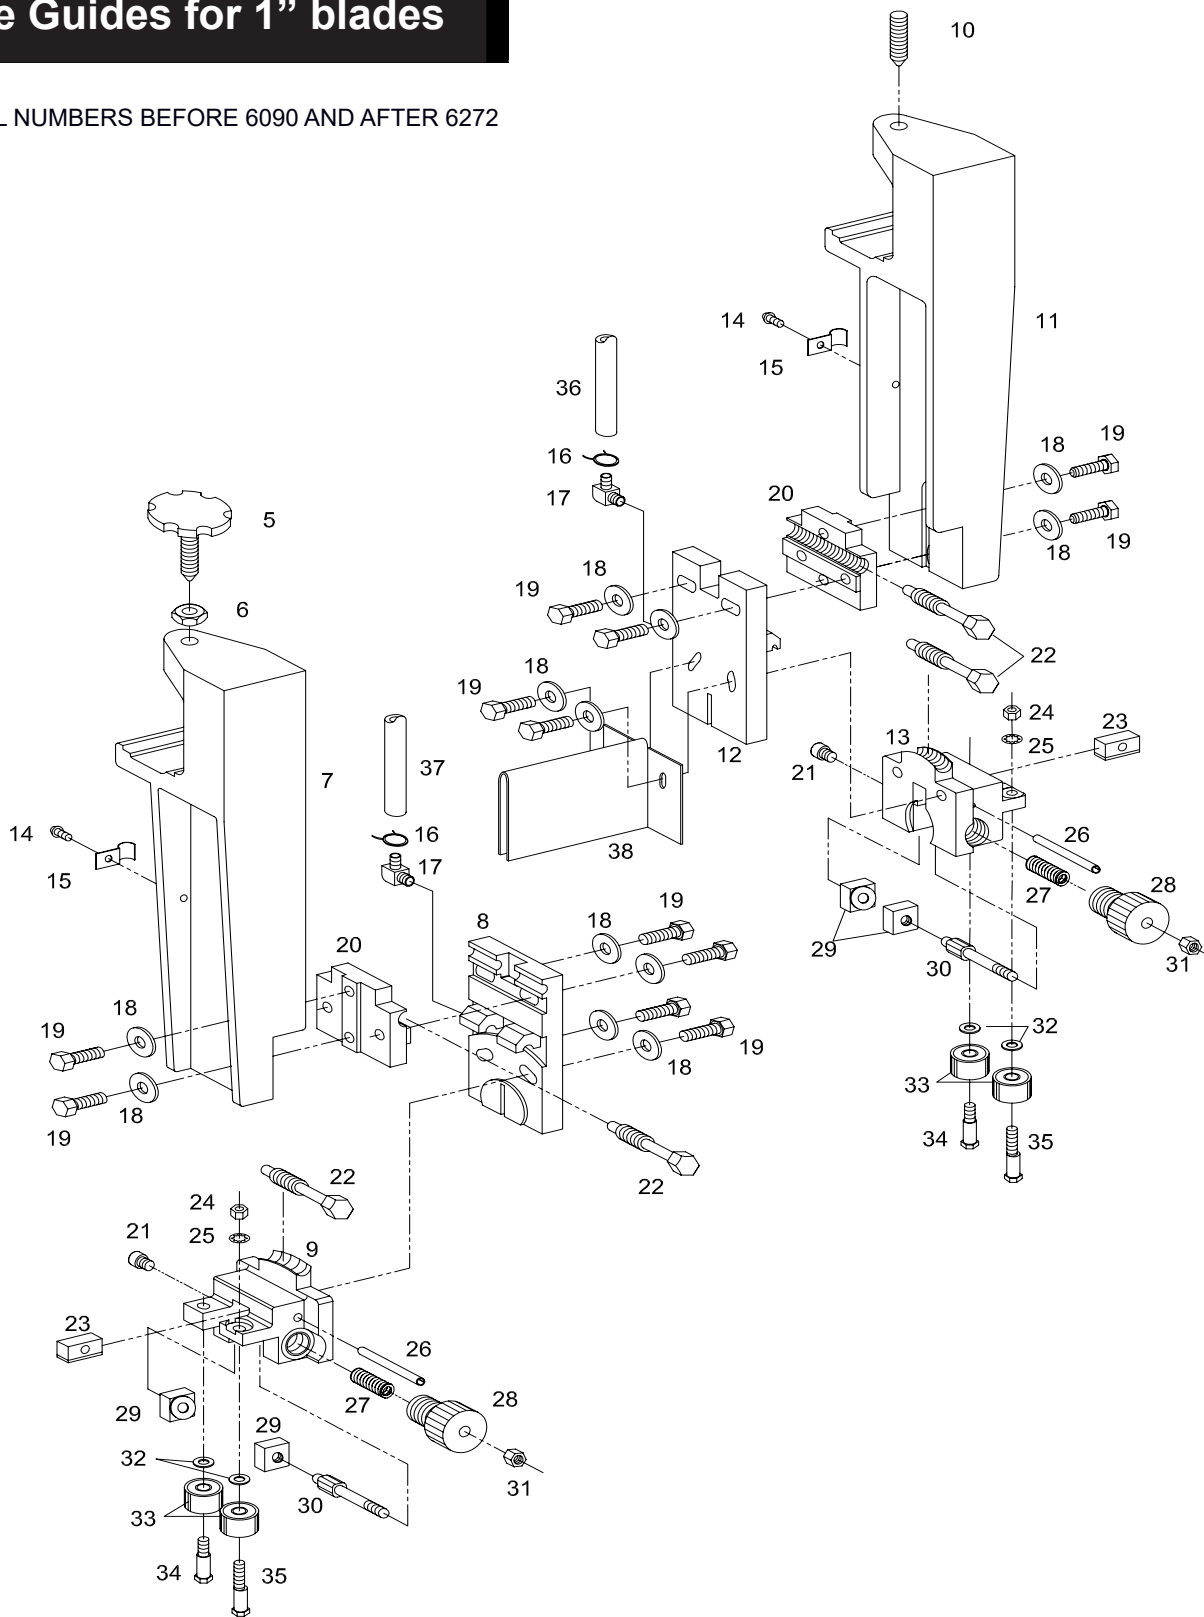


1	152158-005	BLADE GUIDE ASS'Y , DRIVE END (BEFORE 6090 AND AFTER 6272) INCLUDES 10 - 35 (LESS 16)
2	152159-001	BLADE GUIDE ASS'Y , IDLE END (BEFORE 6090 AND AFTER 6272) INCLUDES 5 - 9 & 14 - 35 (LESS 16)
3	152160-001	GUIDE SUPPORT ASS'Y, DRIVE END (BEFORE 6090 AND AFTER 6272) INCLUDES 13 & 21 - 35
4	152161-001	GUIDE SUPPORT ASS'Y, IDLE END (BEFORE 6090 AND AFTER 6272) INCLUDES 9 & 21 - 35
5	105335-001	HAND WHEEL & SCREW ASSEMBLY
6	100019-005	HEX JAM NUT, 1/2-13
7	152118	ROLLER GUIDE BRACKET, IDLE END
8	152121-002	HORIZONTAL ADJUSTING BLOCK, D.E.
9	152120	GUIDE SUPPORT, I.E.
10	100035-013	SET SCREW, SH, 1/2-13 X 1-1/4
11	152117	ROLLER GUIDE BRACKET, DRIVE END
12	152121-003	HORIZONTAL ADJUSTING BLOCK, I.E.
13	152119	GUIDE SUPPORT, D.E.
14	100013-005	CAP SCREW, SH, 10-32 X $\frac{3}{8}$
15	100218-018	CLAMP
16	100219-002	HOSE CLAMP
17	100324-009	HOSE BARB, $\frac{1}{4}$ " HOSE, 90°
18	100029-002	FLAT WASHER
19	100004-018	CAP SCREW, HH, 5/16-18 X 1
20	152155	VERTICAL ADJUSTING BLOCK
21	100008-004	CAP SCREW, SH, 5/16-18 X $\frac{5}{8}$
22	152151	ADJUSTING BOLT
23	152153	CARBIDE BACK UP GUIDE
24	101300	HEX NUT, 5/6-18
25	100027-005	LOCK WASHER, SHAKEPROOF
26	100053-036	ROLL PIN, $\frac{1}{4}$ X 2
27	100136-009	SPRING
28	152156	ADJUSTING KNOB
29	106317	FIXED CARBIDE GUIDE
30	152157	STUD
31	100023-006	NYLON LOCK NUT, 1/4-20
32	100097-001	FLAT WASHER
33	100416-001	GUIDE BEARING (BEFORE 6090 AND AFTER 6272)
34	B-043	ROLLER AXLE
35	B-109	ECCENTRIC ROLLER AXLE (BEFORE 6090 AND AFTER 6272)
36	100350-018	COOLANT HOSE, DRIVE END
37	100350-040	COOLANT HOSE, IDLE END
	100350-068	COOLANT HOSE, IDLE END FOR 1316S EXTENDED
38	150484	BLADE GUARD

## Blade Guides for 1" blade

FOR SERIAL NUMBERS BEFORE 6090  
AND AFTER 6272

## Rite Tensioning Device®

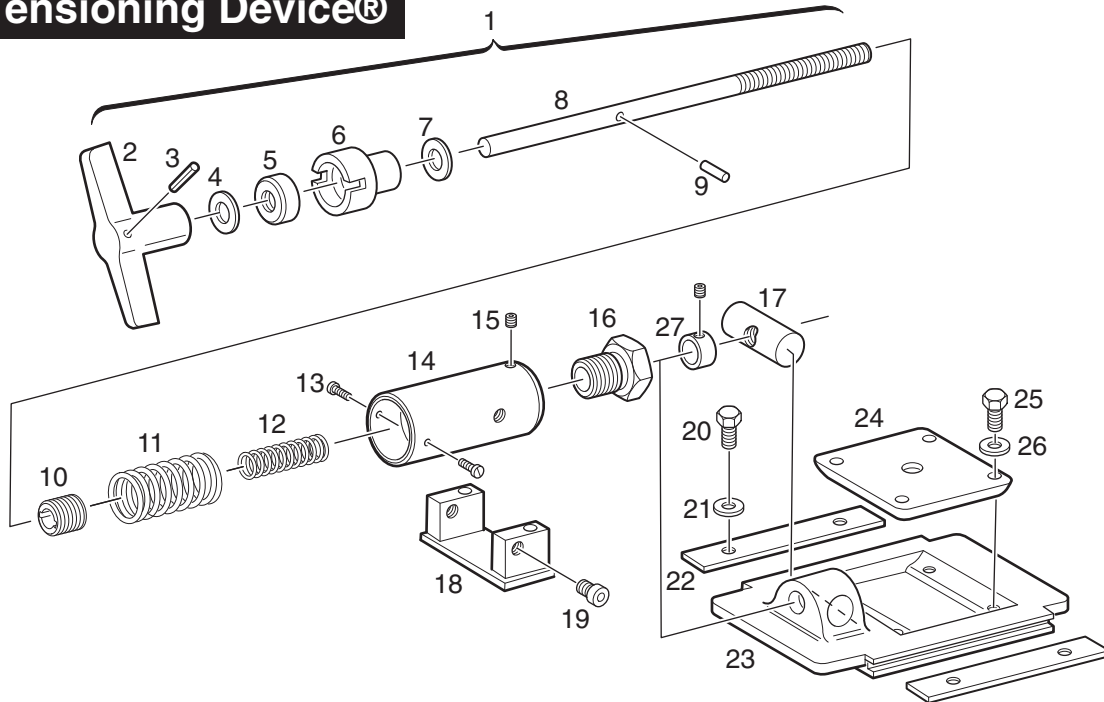

### Calibrating the WELLSAW RITE-TENSION ® Blade Tensioning Device

The Rite-Tension® device is a simple turn counter that is activated by blade tension and can be easily adjusted in the field.

*Please review the operation instructions before making any adjustment:*

#### 1. LOOSENING

When replacing a worn or broken blade always turn the "T" handle out at least six (6) turns (counter-clockwise).

This will reset the device. **Always push-in** on the handle when loosening, this will insure that the internal counter is engaged.

#### 2. TIGHTENING

**Always pull out** on the "T" handle when tightening the device (clockwise). After a number of turns the "T" handle will come to a hard stop.

At this point the blade will be properly tensioned. Do not force the unit beyond this point.

*Note:* If the mechanism does not seem to come to a hard stop but continues to tighten, stop and repeat steps one and two. Check to make sure the blade is properly positioned on the band wheels and is not binding in the guides during the tightening process.

### Calibration


The final tension is determined by the Adjusting Nut, pn 150070 (see "A" in drawing). The "rough" position can be checked by measuring the clearance between the nut and the Tensioning Housing, pn 150067, (see "C").

A clearance of 1/4" will be within a safe range of the correct tension. When a tension guage becomes available the device should be calibrated as follows: Loosen the set screw (B) one turn.

-If the band tension needs to be *increased* the adjusting nut should be turned out, one flat at a time, then the set screw tightened and the device rechecked.

-If the tension needs to be *decreased* the adjusting nut should be turned in, one flat at a time and rechecked.

*The device must be in the "loosened" or "open" position to make this adjustment.*

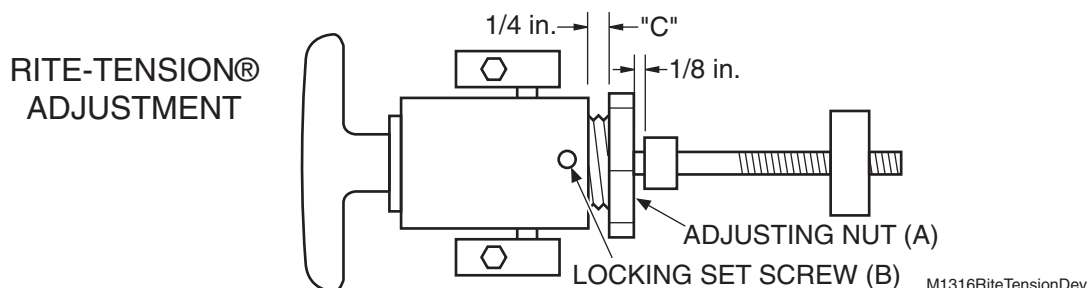

M1316RiteTensionDev

## Rite Tensioning Device®

### Caution:


The Rite Tension ® blade tensioning device has been factory calibrated for your saw.

When re-tightening or replacing a blade, the 'T' handle must be turned counter-clockwise at least six turns to reset the Rite Tension ® mechanism.

<b>1</b>	<b>150075</b>	<b>Blade Tensioning Ass'y</b>
		<b>(includes items 2 thru 17 and 27)</b>
2	101184	Take Up Screw Handle
3	100053-005	Roll Pin, 3/16 x 1
4	100030-007	Flat Washer, 1/2
5	100410-001	Thrust Bearing
6	150068	Bearing Housing
7	100116-007	Belleville Washer (2 req'd)
<b>8</b>	<b>150074</b>	<b>Take Up Screw (includes items 2 &amp; 9)</b>
9	100052-026	Dowel Pin, 3/16 x 11/16
10	150069	Turn Counter
11	100136-006	Spring, Large Diameter
12	100136-001	Spring, Small Diameter
13	100000-010	Machine Screw, 8-32 x 5/16 (2 req'd)
14	150067	Blade Tension Housing
15	100034-008	Set Screw, 1/4-20 x 1/4
16	150070	Tension Adjuster
17	155068	Swivel Nut
18	150190	Tensioner support
19	100008-072	Cap Screw, HH 5/16-18 x 3/8 (2 req'd)
20	100004-013	Cap Screw, HH 5/16-18 x 5/8 (4 req'd)
21	100025-002	Lock Washer, 5/16 (4 req'd)
22	B-046	Slide Block Guide, (2 req'd)
23	101164	Slide Block
24	B-010	Wheel Adjusting Block
25	100004-019	Cap Screw, HH 5/16-18 x 1-1/8 (4 req'd)
26	102360	Spacer (4 req'd)
27	098030-004	Collar, w/ set screw



# Motor & Gear Box

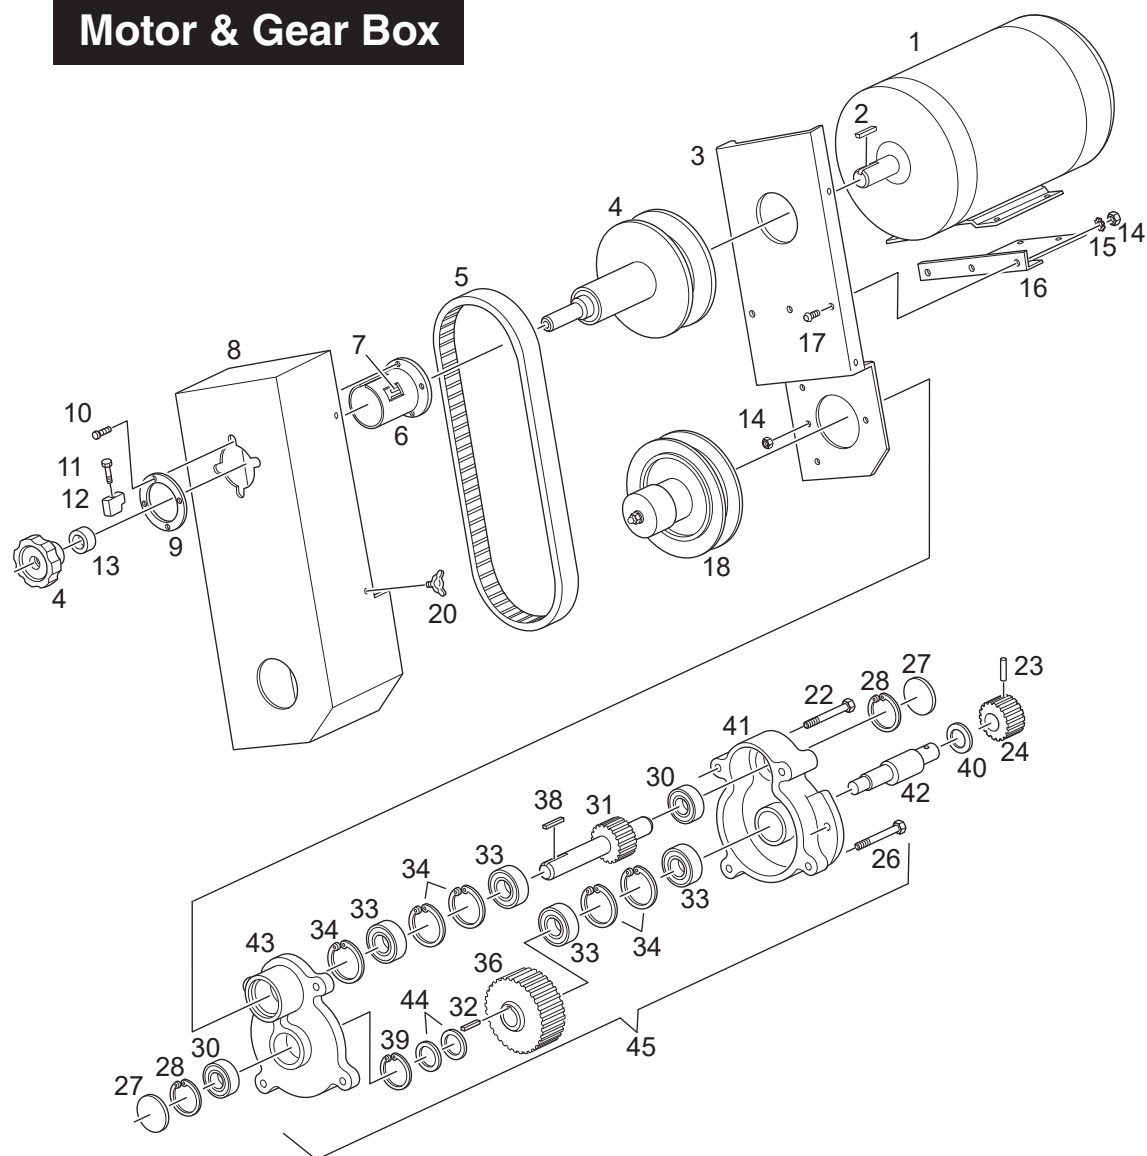


M1316MotorGearBox-2

## Motor & Gear Box


1	100835-037	Motor, 3 HP TEFC, 3/4" shaft 3 phase - for s/n before 6559, need new pulley -021 too.
	100836-030	Motor, 2 HP, 115-220/60/1
2	100056-037	Key
3	150250	Belt Guard, Bottom Plate
4	105451-008	VS Motor Pulley, 7/8" bore, 3 Ph old style (before s/n 6559)
	105451-021	VS Motor Pulley, 3/4" bore used after s/n 6559 or if replacement motor is needed.
	105451-005	VS Motor Pulley, 5/8" bore, 1 Ph (all include hand wheel 407-712)
	407-712	Handle/ knob only (without pulley)
5	105454-005	Variable Speed Belt
6	150252	Sleeve
7	105688	Blade Speed Label
8	150251	Belt Guard
9	150255	Flange Clamp
10	100013-008	Cap Screw, BH 1/4-20 x 3/8
11	100008-087	Cap Screw, SH 1/4-28 x 3/4
12	150256	Blade Speed Indicator
13	150217	Spacer
14	100017-001	Hex Nut, 1/4-20
15	100026-004	Shake Proof Washer, 1/4
16	150249	Belt Guard Support
17	100155-001	Machine Screw, 1/4-20 x 1/2
18	105451-015	VS Driven Pulley w/step key, 3/4" bore
20	100063	Thumb Screw (4 req'd)
22	100008-086	Cap Screw, SH 1/4-20 x 2
23	100180-001	Coiled Spring Pin
24	101645-FP	Drive Pinion
26	100008-061	Cap Screw, SH 1/4-20 x 1-1/2
27	100072-001	Expansion Plug
28	100068-001	Snap Ring
30	100404-002	Ball Bearing
31	150234	Pulley Shaft & Pinion
32	100056-001	Key
33	100414-003	Bearing
34	100068-002	Snap Ring
36	101286S	Driven Gear - Steel
38	105451-017	Step Key
39	100069-003	External Snap Ring
40	150416	Spacer
41	150424	Case
42	150426	Drive Shaft
43	150425	Gear Case Cover
44	100097-003	Washer (shim as needed)
45	150423	Gear Box Ass'y

# Coolant System

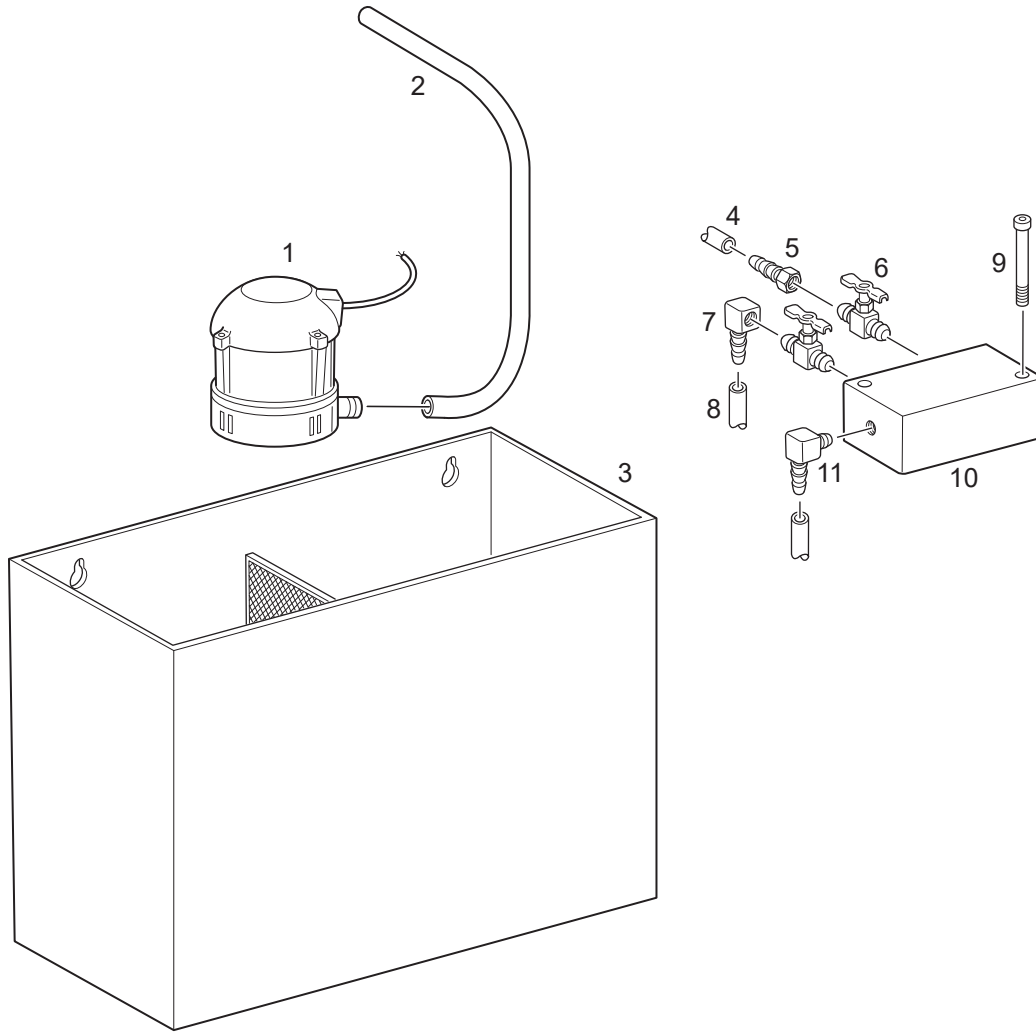

- |    |            |  |
|----|------------|--|
| 1  | 100249-010 | Coolant Pump   |
| 2  | 100220-049 | Coolant Hose from Pan 3/8" x 154"                              |
| 3  | 150066     | Coolant Tank w/ filter   |
| 4  | 100350-040 | Coolant Hose, I.E. 1/4" x 40" for 1316S                        |
|    | 100350-068 | Coolant Hose, I.E. 1/4" x 68" for 1316S-EXT                    |
| 5  | 100324-003 | Hose Barb, 1/4"  |
| 6  | 100226-004 | Needle Valve   |
| 7  | 100324-009 | Hose Barb, 1/4" 90 degree                                      |
| 8  | 100350-018 | Coolant Hose, D.E. 1/4" x 18"                                  |
| 9  | 100008-068 | Cap Screw, Button Head, 10-32 x 1-1/4"                         |
| 10 | 152167     | Coolant Manifold   |
| 11 | 100324-010 | Hose Barb, 3/8 90 degree                                       |
| 12 | 152177-002 | <b>Coolant Manifold Assembly (includes items 5-7 &amp; 10)</b> |


## Blade Brush Assembly

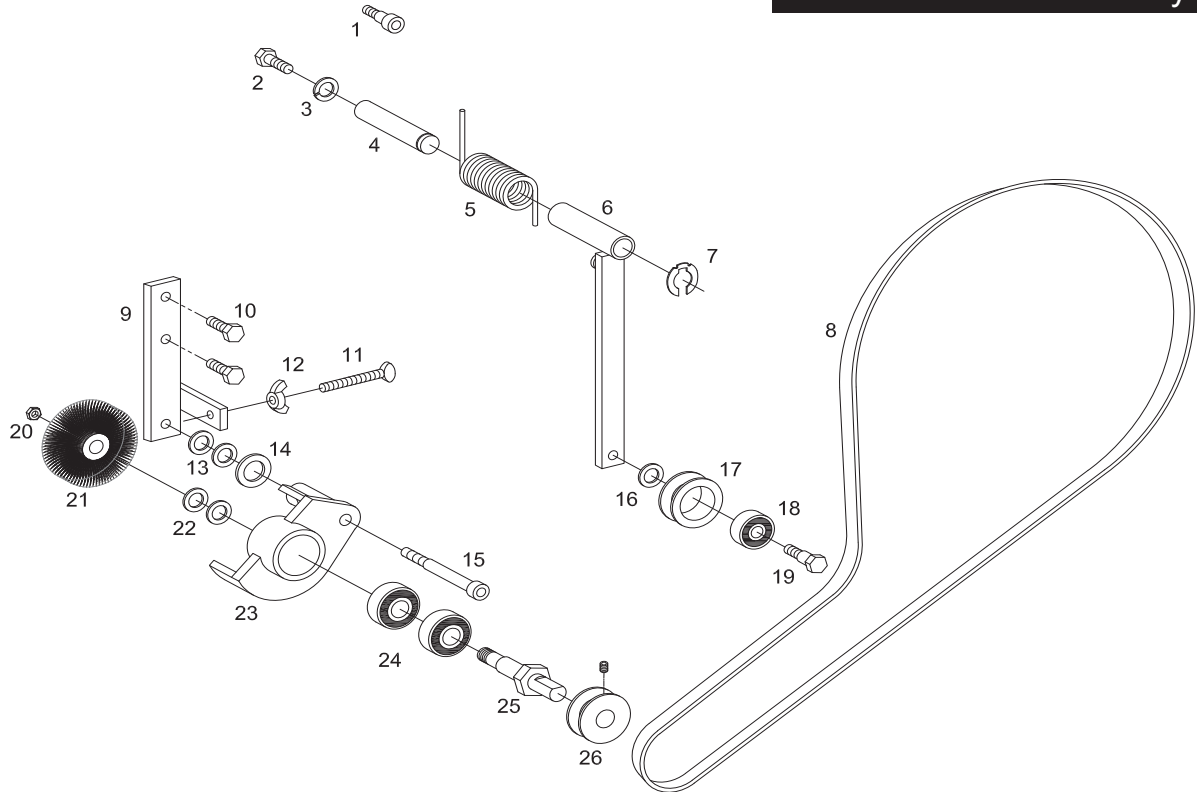

Note: Adjust thumb screw (11) so that the brush makes light contact with the blade. This avoids dulling the blade and prevents premature brush wear.

1	100165-007	Shoulder bolt, 3/8 x 3/8	17	150361	Pulley, belt idler
2	100004-018	Cap Screw, HH 5/16-18 x 1	18	100416-001	Bearing
3	100025-002	Lockwasher, 5/16	19	B-043	Axle
4	150160-002	Door Latch Stud	20	100019-005	Hex Jam Nut 1/2-20
5	150360	Spring	21	100133-004	Blade Brush
6	150364	Belt Tension Arm	22	100030-007	Flat Washer 1/2 USS (2 required)
7	100069-003	Snap Ring	23	150257	Brush Housing
8	100166-450	V' Belt	24	100404-001	Bearing (2 required)
9	150369	Blade Brush Arm	25	150126	Brush Arbor
10	100004-015	Cap Screw, HH 5/16-18 x 3/4	26	100167-003	Small Pulley w/ set screw
11	100042-003	Thumb Screw, 1/4-20 x 2	27	<b>150272</b>	<b>BLADE BRUSH ASSEMBLY</b>
12	100024-002	Wing Nut, 1/4-20			(includes items 20-26)
13	100029-002	Flat Washer 1/2 USS (uses 2)			
14	100030-005	Flat Washer 3/8 SAE			
15	100165-015	Shoulder Bolt 3/8 x 1-3/4			
16	100097-001	Washer			


# Electrical Controls

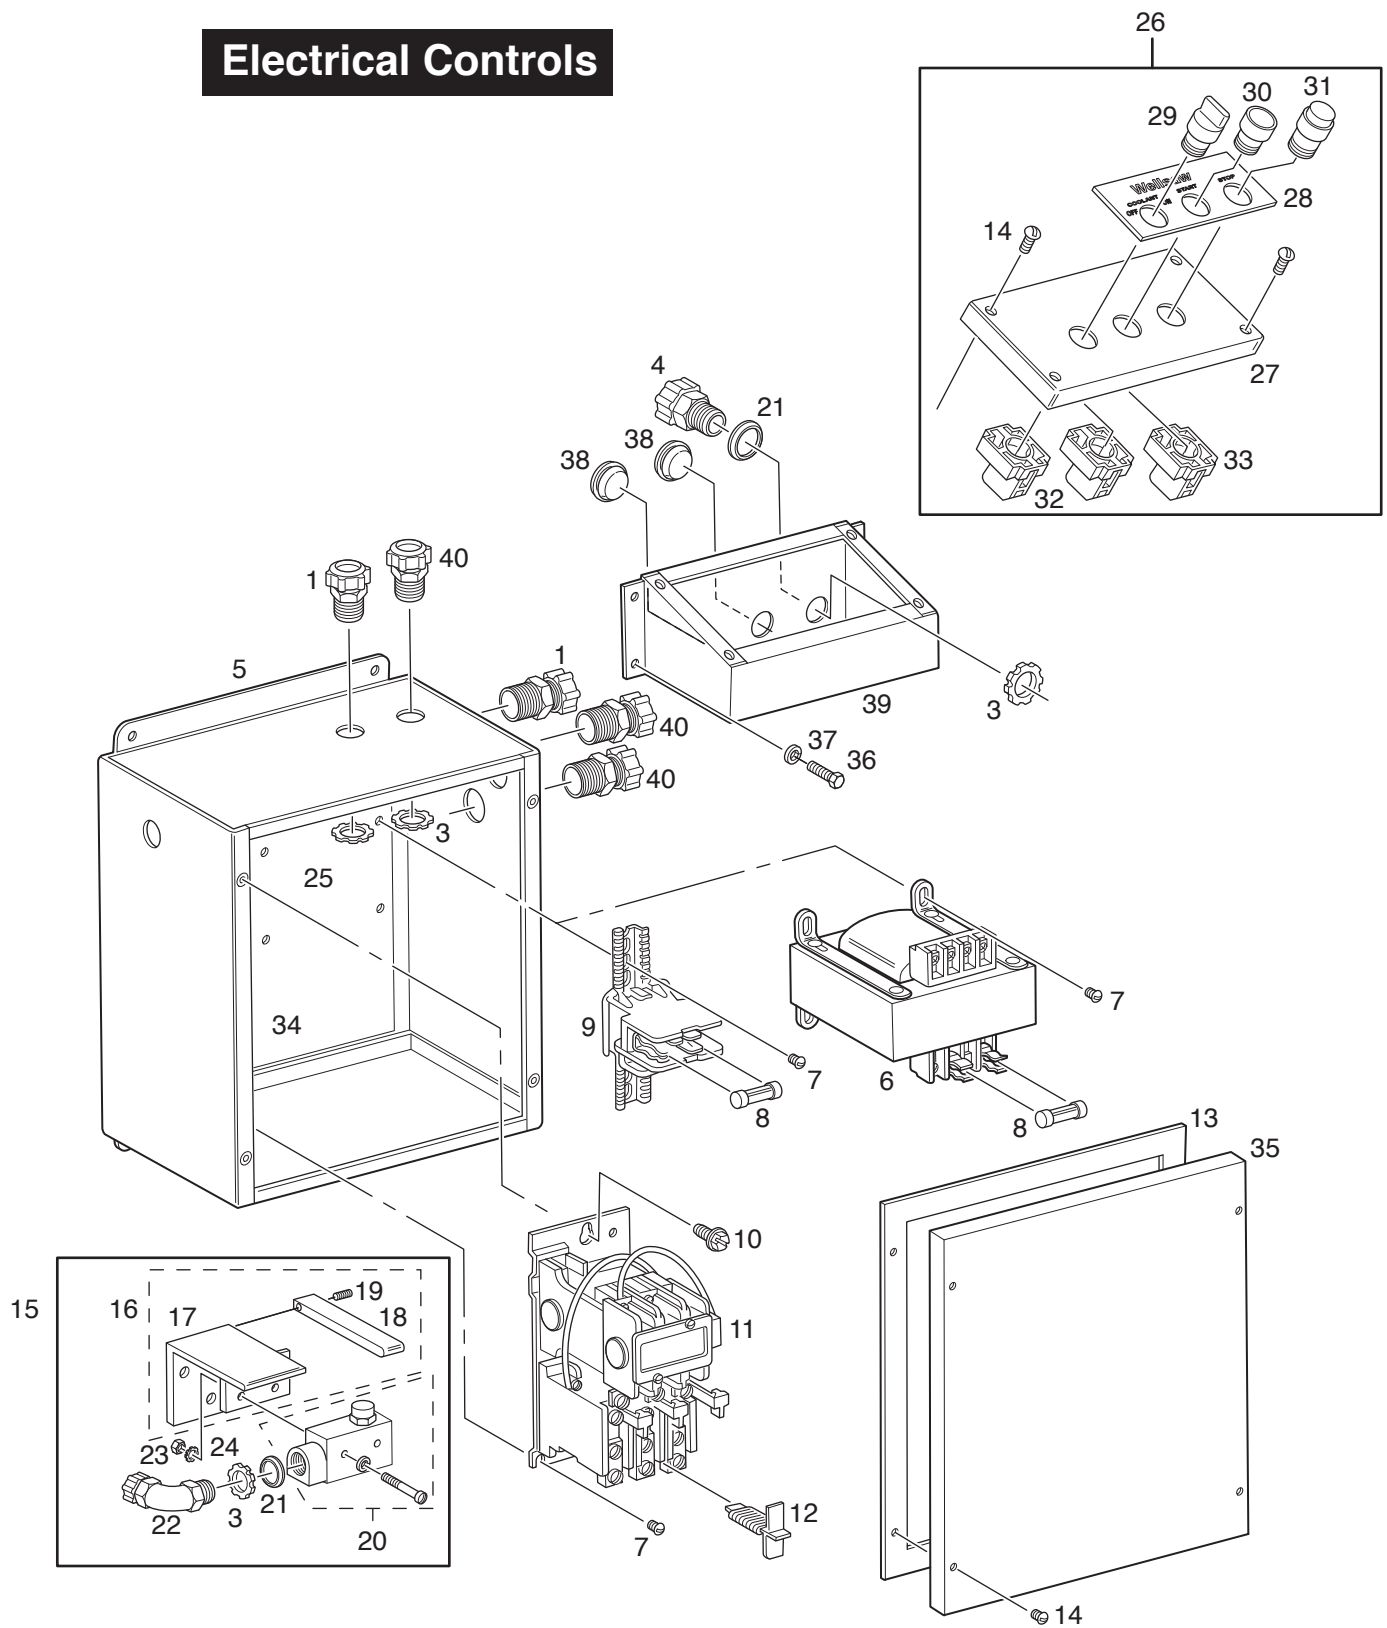

## Electrical Controls

1	100612-004	Connector, TB-2534		
2	100612-001	Connector, TB-2521		
3	100240-001	Conduit Lock Nut		
4	100612-002	Connector, TB-2523		
5	100870	Electrical Enclosure		
6	100869	Transformer, 230/460 Volts		
	100869-001	Transformer, 208 Volts		
	100869-006	Transformer, 575 Volts		
7	100000-017	Machine Screw, RH 10-32 x 1/4		
8	100628-017	Fuse, FNA 2-1/2 Amp		
9	155115	Fuse Block Ass'y (used w/ 115/60/1 only)		
10	100796-010	Ground Screw, 10-32 x 3/8		
11 *	100867	Starter 208,230,460V before s/n 6539		
	100867-018	Starter 115V before s/n 6539		
	<b>100867-029</b>	<b>IEC Starter 208,230,460V sn 6539 +later</b>		
	<b>100867-023</b>	<b>IEC Starter 115V sn 6539 +later</b>		
		<b>Adjustable Overload for IEC (get amps off motor)</b>		
	<b>100867-012</b>	<b>4-6 amps (460V)</b>		
	<b>100867-014</b>	<b>7-10 amps (208-230/3)</b>		
	<b>100867-027</b>	<b>9-13 amps (208-230/1)</b>		
	<b>100867-022</b>	<b>16-24 amps (110-120/1)</b>		
	<b>100717-016T4</b>	<b>Mounting Rail for IEC (not pictured)</b>		
12	100888-B32	Heater, B32 115/60/1 (1 req'd)		
	100888-B14	Heater, B14 230/60/1 (1 req'd)		
	100888-B102	Heater, B10.2, 208-230/3 (3 req'd)		
	100888-B415	Heater, B41.5 460/60/3 (3 req'd)		
	100888-B210	Heater, B21.0 575/60/3 (3 req'd)		
13	098048-050	Gasket, SC 41, 1/8 x 3/4 x 50"		
14	100000-019	Machine Screw, RH 10-32 x 1/2		
15	<b>155118</b>	<b>Frame Rest Ass'y, w/ cord (Includes items 17 thru 24)</b>		
16	<b>155118-001</b>	<b>Frame Rest w/ Trip Bar (Includes items 17 thru 19)</b>		
17	105977	Frame Rest		
18	150344	Switch Bar Weldment		
19	100165-005	Shoulder Bolt, 5/16 x 3/4		
20	100782-012	Limit Switch, 115v w/ screws		
21	100606-001	Sealing Ring		
22	100612-006	Elbow, 90 deg, TB-2268		
23	100015-005	Hex Nut, 6-32 (2 req'd)		
24	100026-001	Washer, Shake Proof, #6 (2 req'd)		
25	100240-003	Conduit Lock Nut		
26	<b>155117</b>	<b>Control Switch Ass'y (includes items 27 thru 33)</b>		
27	155095	Switch Box Cover		
28	150230	Legend Plate		
29	100871-003	Selector Switch, Coolant		
30	100871-001	Push Button Start		
31	100871-013	Push Button Stop		
32	100871-004	Switch Block, Coolant & Start		
33	100871-005	Switch Block, Stop		
34	100893	Back Panel		
35	100892	Enclosure Cover		
36	100004-003	Cap Screw, HH, 1/4-20 x 1/2		
37	100025-001	Lock Washer, 5/16		
38	100612-001	Connector, TB-2521		
39	155094	Switch Box		
40	<b>100871-014</b>	<b>Emergency Stop Switch for top of frame (not pictured)</b>		

# Electrical Schematic

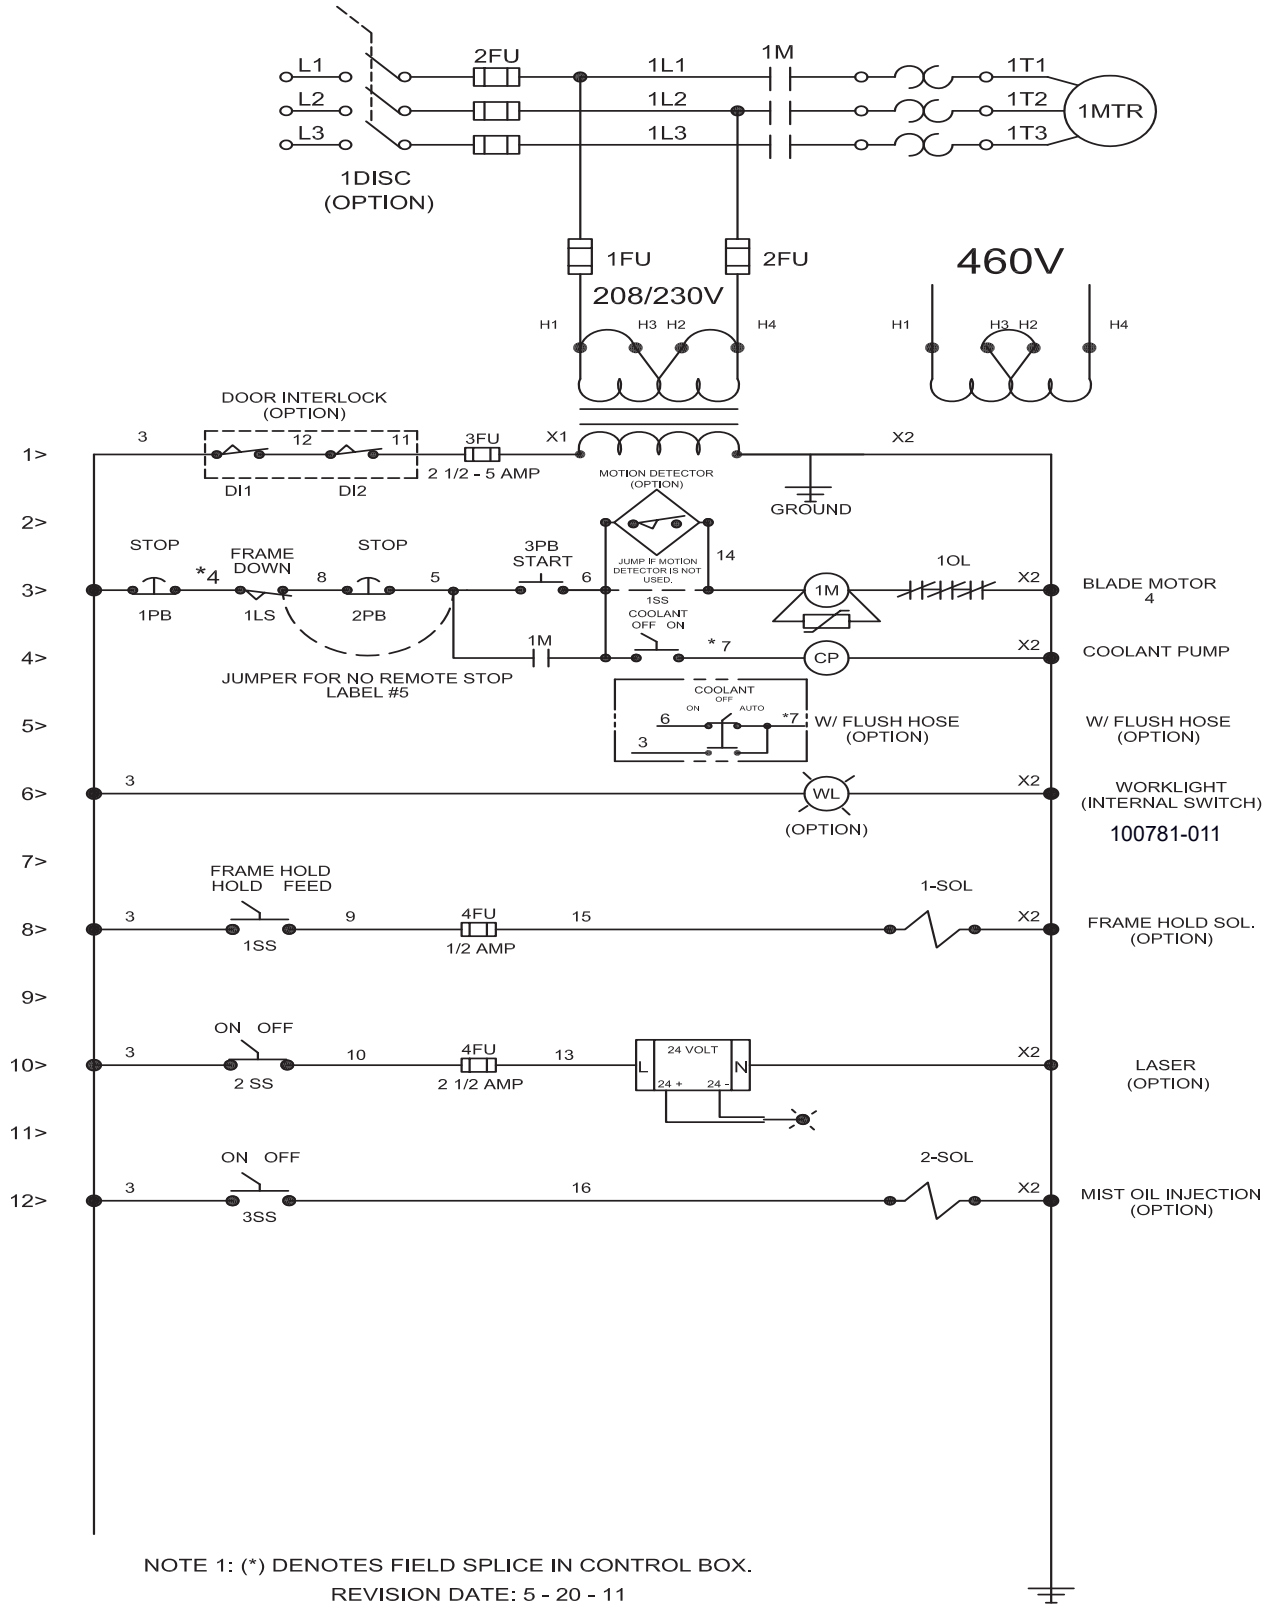




	C.O.	DATE	BY		C.O.	DATE	BY	NEXT ASSEMBLY	MODEL NUMBER	NUMBER REQUIRED	NEXT ASSEMBLY	MODEL NUMBER	NUMBER REQUIRED
A				D									
B				E									
C				F									

1316S-EH 1

PARTS LIST

ITEM #	PART #	DESCRIPTION	QTY
1	098030-004	COLLAR, W/SET SCREW	3
2	100013-005	10-32 X $\frac{3}{8}$ BTN HD CAP SCREW	6
3	100019-029	$\frac{3}{8}$ -24 HEX JAM NUT	2
4	100034-008	$\frac{1}{4}$ - 20 X $\frac{1}{4}$ SOC. HD. SET SCREW	1
5	100034-025	$\frac{1}{4}$ - 20 X $\frac{3}{8}$ SOC. HD. SET SCREW	2
6	100050-002	$\frac{3}{16}$ X $\frac{3}{4}$ COTTER PIN	2
7	100054-003	$\frac{3}{8}$ X 1 $\frac{3}{16}$ YOKE PIN	2
8	100139-001	KNOB, BLACK, OVAL	1
9	153047	HANDLE WELDMENT	1
10	153077	CYLINDER FEED ROD SUPPORT	3
11	153099	ROD, CYLINDER DOWNFEED	1
12	153100	ROD, THREADED, $\frac{3}{8}$ - 24	1
13	210259	LINKAGE ARM	2
14	210307	ADJUSTABLE YOKE END	2
15	100034-025	$\frac{1}{4}$ -20 X $\frac{3}{8}$ SET SCREW (NOT SHOWN)	2

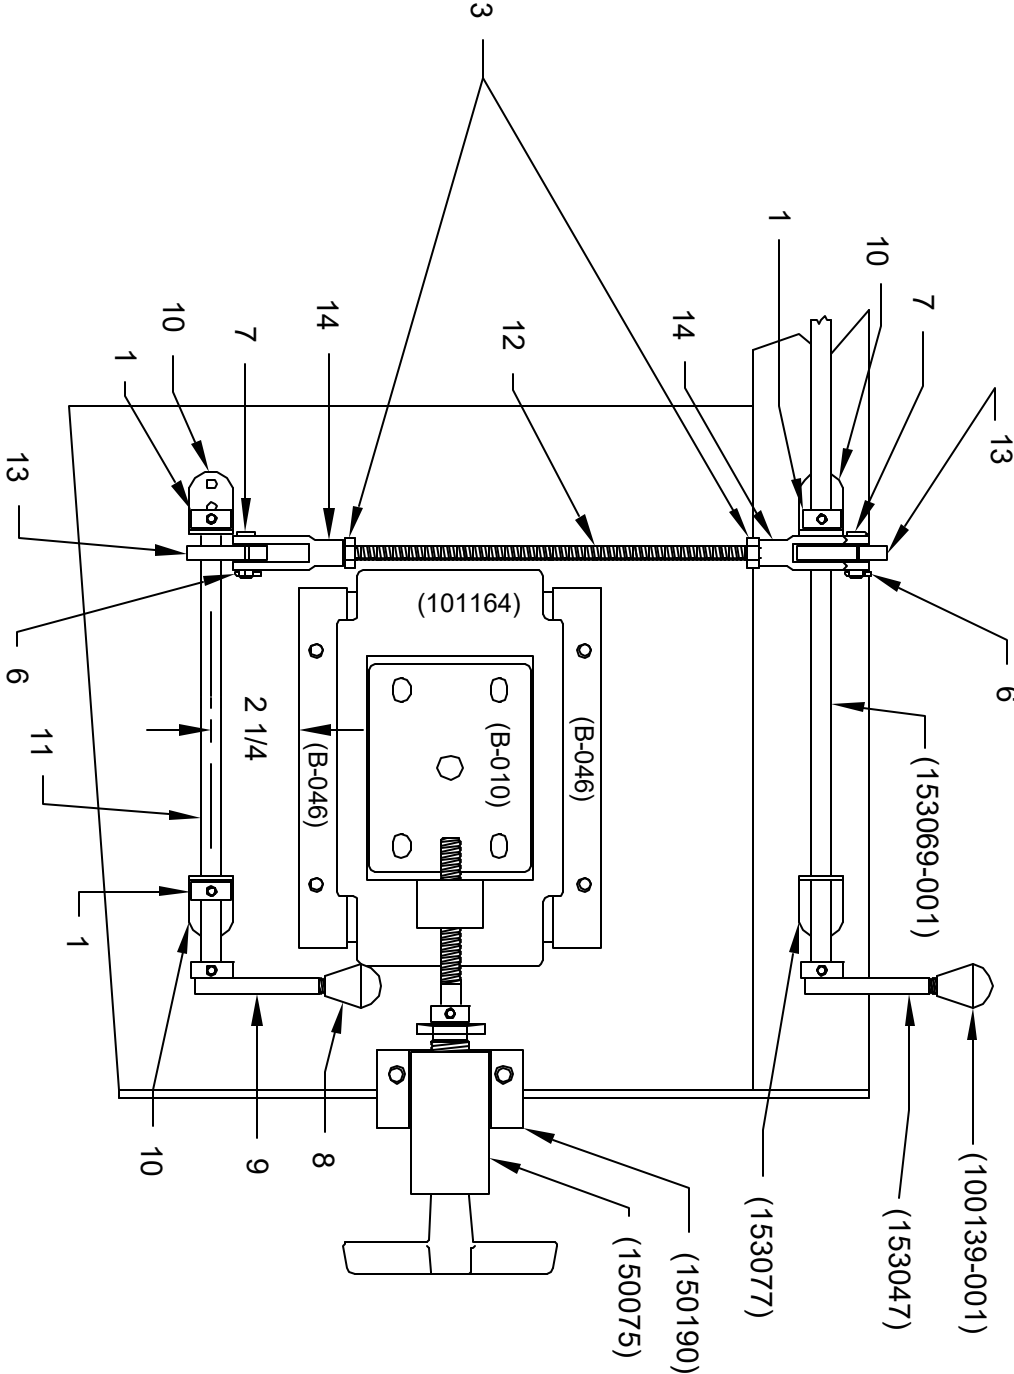

THIS PRINT IS THE PROPERTY OF WELLSAW, INC. AND IS FURNISHED FOR ENGINEERING INFORMATION AND REFERENCE ONLY. THE FURNISHING OF THIS PRINT DOES NOT CONVEY ANY REPRODUCTION OR MANUFACTURING RIGHTS.

UNLESS OTHERWISE SPECIFIED:

1. DECIMAL TOLERANCES, 3 PLACES  $\pm .005$ , 2 PLACES  $\pm .02$
2. INTERPRET DIMENSIONS AND TOLERANCES PER ANSI Y14.5
3. ALL THREADS SHALL BE AMERICAN STANDARD FOR UNIFIED THREADS
4. ALL PIPE THREADS SHALL BE AMERICAN STANDARD FOR PIPE THREADS
5. REMOVE ALL BURRS AND BREAK ALL SHARP EDGES
6. DO NOT SCALE DRAWING

MATERIAL

DRAWN BY S. CARPENTER DATE 8-15-05

CHECKED BY

ENG. APPL

SCALE

NONE

FINISH

Wellsaw

Wellsaw, Inc.  
2829 N. Burdick St.  
Kalamazoo, MI 49004

1316S-EH DOWNFEED  
ASSEMBLY DRAWING

DATE RELEASED

PART NO.

153101

REV.



Stock Dimensions Tooth Pitch	0 - 1" 10/14, 8/12		1" - 3" 8/12, 6/10, 5/8		3" - 6" 5/8, 4/6, 3/4, 3 Sabre		6"+ 3/4, 2/3, 2 Sabre, 1 Tooth, 3/4" T.S.	
Material (Annealed)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)
<u>Carbon Steels</u>								
1008-1013	250	8 - 10	275	9 - 12	280	12 - 15	250	9 - 12
1015-1018	250	8 - 10	275	9 - 12	250	12 - 15	230	9 - 12
1048-1065	200	5 - 7	200	5 - 7	175	8 - 10	150	6 - 8
1065-1095	200	4 - 6	200	5 - 7	150	6 - 8	120	6 - 8
<u>Free Machining Steels</u>								
1108-1111	300	9 - 11	330	12 - 14	275	13 - 15	220	11 - 14
1112-1113	300	8 - 11	330	11 - 13	275	12 - 15	220	12 - 15
1115-1132	300	7 - 11	330	10 - 13	275	13 - 16	220	11 - 14
1137-1151	275	6 - 8	250	8 - 10	250	8 - 11	200	7 - 10
1212-1213	300	8 - 10	320	11 - 13	300	13 - 15	255	11 - 14
<u>Manganese Steels</u>								
1320-1330	250	5 - 7	250	5 - 8	200	8 - 11	175	7 - 10
1335-1345	250	5 - 7	225	5 - 7	200	7 - 9	175	5 - 8
<u>Nickel Chrome Steels</u>								
3115-3130	260	4 - 6	260	5 - 7	230	5 - 7	225	5 - 7
3135-3150	220	4 - 6	200	4 - 7	180	6 - 8	150	5 - 8
3310-3315	200	3 - 4	180	4 - 5	180	5 - 7	160	4 - 6
<u>Molybdenum Steels</u>								
4017-4024	300	3 - 5	270	4 - 7	250	6 - 8	220	5 - 8
4032-4042	300	3 - 5	270	4 - 7	250	6 - 8	230	5 - 8
4047-4068	250	3 - 5	220	4 - 6	200	5 - 7	180	3 - 5
<u>Chrome Moly Steels</u>								
4130-4140	280	4 - 6	250	5 - 8	250	8 - 10	220	6 - 8
4142-4150	230	3 - 5	200	4 - 6	200	5 - 7	170	4 - 6
<u>Nickel Chrome Moly Steels</u>								
4317-4320	250	3 - 5	225	4 - 6	200	5 - 7	170	4 - 6
4337-4340	230	3 - 4	200	4 - 5	200	4 - 6	170	4 - 5
8615-8627	250	4 - 5	230	6 - 7	230	6 - 8	200	6 - 7
8630-8645	250	3 - 5	230	4 - 6	230	5 - 7	180	4 - 6
8647-8660	220	2 - 4	200	3 - 5	200	4 - 6	150	3 - 5
8715-8750	250	3 - 5	220	4 - 6	220	5 - 7	180	4 - 6
9310-9317	200	1 - 3	160	2 - 3	160	2 - 4	150	2 - 3
9437-9445	250	4 - 5	230	4 - 5	230	5 - 6	180	4 - 5
9747-9763	250	2 - 4	230	3 - 5	200	4 - 6	180	3 - 5
9840-9850	240	4 - 5	220	4 - 6	200	5 - 7	180	4 - 6
<u>Nickel Moly Steels</u>								
4608-4621	250	3 - 5	220	5 - 6	220	6 - 7	200	5 - 6
4640	220	3 - 5	200	4 - 6	200	5 - 7	170	4 - 6
4812-4820	200	3 - 5	180	3 - 5	180	4 - 6	160	4 - 5
<u>Chrome Steels</u>								
5045-5046	280	4 - 6	250	5 - 7	250	8 - 10	200	7 - 8
5120-5135	280	4 - 6	250	6 - 7	240	7 - 8	180	5 - 8
5140-5160	250	3 - 5	230	4 - 6	230	5 - 7	200	4 - 6
50100-52100	180	2 - 4	160	3 - 5	150	4 - 6	100	3 - 5
<u>Chrome Vanadium Steels</u>								
6117-6210	225	4 - 5	225	5 - 7	200	6 - 8	170	5 - 7
6145-6152	225	3 - 4	200	4 - 5	200	5 - 6	150	4 - 5
<u>Die Steels</u>								
A-2	210	2 - 3	200	3 - 4	190	3 - 4	180	2 - 3
D-2, D-3	110	1 - 2	100	1 - 2	90	1 - 2	80	1 - 2
D-7	90	1	80	1	70	1	70	1
O-1, O-2	240	3 - 4	210	4 - 5	190	5 - 6	170	4 - 5
O-6	230	3 - 4	200	4 - 6	180	5 - 7	150	4 - 6

Stock Dimensions Tooth Pitch	0 - 1" 10/14, 8/12		1" - 3" 8/12, 6/10, 5/8		3" - 6" 5/8, 4/6, 3/4, 3 Sabre		6"+ 3/4, 2/3, 2 Sabre, 1 Tooth, 3/4" T.S.	
Material (Annealed)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)	Blade Speed (SFPM)	Cutting Rate (SIPM)
<u>Silicon Steels</u>								
9255-9260	200	2 - 4	180	3 - 5	180	3 - 5	150	3 - 5
9261-9262	200	1 - 3	160	2 - 3	160	2 - 4	150	2 - 3
<u>High Speed Tool Steels</u>								
T-1, T-2	130	1 - 2	110	2 - 3	100	2 - 4	90	2 - 3
T-4, T-5	110	1 - 2	100	1 - 2	90	2 - 3	80	1 - 2
T-6, T-8	110	1 - 2	100	1 - 2	80	1 - 2	70	1 - 2
T-15	80	1	80	1	70	1	50	1
M-1	150	1 - 3	140	2 - 4	130	3 - 5	110	2 - 4
M-2, M3	120	1 - 2	110	2 - 3	100	3 - 4	80	2 - 3
M-4, M-10	100	1 - 2	90	1 - 2	80	1 - 3	60	1 - 2
<u>Hot Work Steels</u>								
H-12, H-13, H-21	150	2 - 4	125	3 - 5	125	2 - 4	125	2 - 4
H-22, H-24, H-25	150	1 - 3	125	1 - 3	125	1 - 3	125	1 - 3
<u>Shock Resisting Tool Steels</u>								
S-1	220	2 - 4	180	3 - 5	165	3 - 5	150	2 - 4
S-2, S-5	170	1 - 3	150	3 - 5	120	2 - 4	100	1 - 3
<u>Special Purpose Tool Steels</u>								
L-6	200	2 - 4	180	3 - 5	170	3 - 5	150	2 - 4
L-7	200	2 - 4	180	3 - 5	150	3 - 5	100	2 - 4
<u>Stainless Steels</u>								
201, 202, 302, 304	120	2 - 4	100	2 - 4	100	2 - 4	100	1 - 3
303, 303F	140	2 - 4	120	2 - 4	100	3 - 5	100	2 - 4
308, 309, 310, 330	90	1	70	1	60	2	60	1
314, 316, 317	90	1	80	1	70	2	60	1
321, 347	130	1 - 3	110	1 - 3	100	2 - 4	80	1 - 3
410, 420, 420F	150	1 - 3	130	1 - 3	120	2 - 4	100	1 - 3
416, 430F	200	3 - 5	180	4 - 6	170	5 - 7	150	4 - 6
430, 446	100	1 - 3	90	2 - 4	80	2 - 4	80	1 - 3
440 A,B,C	120	1 - 3	10	1 - 3	90	2 - 4	70	1 - 3
440F, 443	150	1 - 3	130	1 - 3	120	2 - 4	100	1 - 3
17-4PH, 17-7PH	100	2 - 3	90	2 - 4	80	3 - 4	80	2 - 3
A-7	100	1 - 2	100	1 - 2	100	2 - 3	100	2 - 3
<u>Beryllium Copper #25</u>								
BHN 100-120	350	4 - 6	300	5 - 7	275	6 - 8	225	5 - 7
BHN 220-250	250	2 - 4	225	3 - 5	200	3 - 4	175	3 - 5
BHN 310-340	200	1 - 2	160	1 - 2	140	2 - 3	100	1 - 2
<u>Nickel Base Alloys</u>								
Monel	100	1 - 2	100	1 - 2	80	1 - 2	60	1
R Monel	140	2 - 3	140	2 - 4	125	2 - 4	75	2 - 3
K Monel	100	1	80	1	60	1	60	1
KR Monel	100	1 - 3	90	1 - 3	80	1 - 3	60	1 - 2
Inconel	110	1 - 2	100	1 - 3	80	1 - 3	80	1 - 2
Inconel X	90	1	80	1	70	1	60	1
Hastelloy A	120	1 - 2	100	1 - 2	85	2 - 3	75	1 - 2
Hastelloy B	110	0 - 1	100	1 - 2	90	1 - 2	75	0 - 1
Hastelloy C	100	0 - 1	90	0 - 1	70	0 - 1	60	0 - 1
Rene 41	90	1	90	1	90	1 - 2	90	1 - 2
Udimit	100	1	90	1 - 2	90	1 - 2	90	1 - 2
Waspalloy	90	1	90	1 - 2	90	1 - 2	90	1 - 2
Titanium	100	1 - 2	100	2 - 3	100	2 - 3	100	2 - 3
<u>Titanium Alloys</u>								
TI-4AL-4MO	100	0 - 1	90	0 - 1	80	0 - 1	70	0 - 1
TI-140A2CR-2MO	100	0 - 1	90	0 - 1	80	0 - 1	60	0 - 1

The Original.....Since 1926



2829 N. Burdick St.  
Kalamazoo, MI 49004  
Phone: 269-345-1132  
Fax: 269-345-0095  
website: [www.wellsaw.com](http://www.wellsaw.com)  
email: [parts@wellsaw.com](mailto:parts@wellsaw.com)